


ONKYO SERVICE MANUAL

STEREO CASSETTE TAPE DECK

MODEL TA-RW490

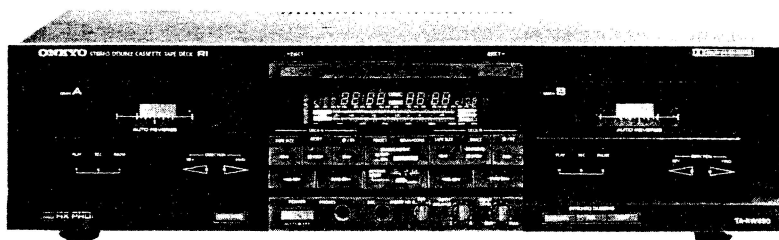

Black model

UDN, UDC, UD	120V AC, 60Hz
UG	220V AC, 50Hz
UW	120 or 220V AC, 50/60Hz
UQA, UQB	240V AC, 50Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

Track System:	4-tracks, 2-channels
Erasing System:	AC erase
Tape Speed:	4.8 cm/sec. (1-7/8 i.p.s.) 9.6 cm/sec. (3-3/4 i.p.s.) (high speed dubbing)
Wow and Flutter:	0.06% (WRMS)
Frequency Response:	20–15,000Hz (Normal) (30–14,000Hz \pm 3dB) 20–26,000Hz (High) (30–15,000Hz \pm 3dB) 20–17,000Hz (Metal) (30–16,000Hz \pm 3dB)
S/N Ratio:	Dolby NR off: 58dB (metal position tape) A noise reduction of 10dB above 5kHz and 5dB at 1kHz is possible with Dolby B NR. A noise reduction of 20dB at 5kHz is possible with Dolby C NR.
Input Jacks:	Microphone jack: 1 Input sensitivity: 1mV/600 ohms Input impedance: 5.6 kohms Line IN: 2 Input sensitivity: 60mV Input impedance: 50 kohms
Outputs:	Headphone jack: 1 Optimum load impedance: 8 to 200 ohms Line OUT: 2 Standard output level: 500mV (0dB) Optimum load impedance: over 50 kohms
Motors:	DC servo motor x 2; DC motor x 2
Heads:	REC/PB: special hard permalloy x 2; Erase head: ferrite x 2

ONKYO
AUDIO COMPONENTS


Power Supply:	AC 120V, 60Hz
Power Consumption:	37 watts
Dimensions:	435(W) x 115(H) x 334 (D) mm (17-1/8" x 4-1/2" x 13-1/8")
Weight:	6.2 kg. (13.6 lbs.)

Specifications and external appearance are subject to change without notice because of product improvements.

SERVICE PROCEDURES

1. Replacement of power supply cord

There are two power supply cord outlets on the strainrelief. Insert them in prescribed direction to ensure safety. AS-UC-3 (UD<120V> model) should be inserted lengthwise and other types of cords should be inserted horizontally.

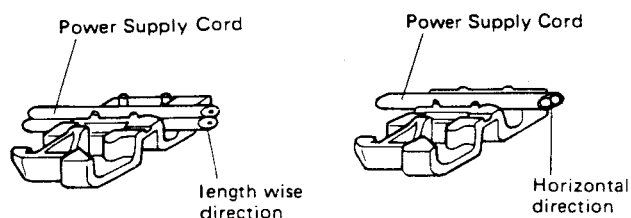

2. Instruction resistance measurement

Connect the insulating-resistance tester between the plug of power supply cord and chassis.

Specifications; 500V more than 10MΩ

MECHANISM OPERATION

1. Overview of the Cassette Drive Mechanism

The cassette drive mechanism consists of two motors and one solenoid. It is based on the same principle as our previous three-motor mechanisms (which employed separate capstan, reel and assist motors) except that one motor is used for both the reel and assist functions. The solenoid is provided to switch between the two functions. As the mechanism is basically identical to our previous three-motor configuration except for the reel/assist switching function, the discussion below will focus on the switching function's main features.

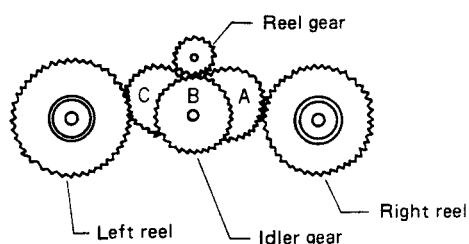


Figure 1: Frontal View of the Assist/Reel Drive Train

In the previous (three-motor) mechanism, the idler gear had two positions: A for fast forward and C for rewind. In the new configuration a third position (B) is added for assist operation.

In the B position, the idler gear is linked to a cam which raises and lowers the heads and rotates them during auto-reverse play. To keep the gear firmly in position, a notched lever presses up against the gear shaft from below. The gear shaft rests in the notch in the lever, maintaining the idler gear in the B position. This arrangement makes it possible to use a single motor for both the reel and assist functions.

Attraction from the solenoid is used to switch from the assist position (position B in figure 1 above) to either the rewind or fast forward position for reel operation. Attractive force from the solenoid is applied to the notched lever, pulling it downward. This disengages the gear shaft from the notch and frees the gear. Then, by applying voltage to the motor, the idler gear can be moved to either the A or C position for reel operation. The notched lever also acts a brake for the reels when solenoidal attraction is applied.

In order to switch back from reel to assist operation, the polarity of the voltage being applied to the motor is reversed. This causes the gear to jerk in the direction of the opposite reel. When it comes to point B, however, the gear shaft catches in the notch in the lever, holding the gear in position for assist operation. This design ensures that the idler gear always switches initially to the assist position before switching to another operation. This also guarantees that the mechanism will be in the correct position after all operations are completed.

The assist/reel motor uses three different voltages to perform the operations described above. The approximate voltages are as follows: 8V for assist operations; 6V for high-speed fast forward and reverse; and 3.5V for recording and playback. They are controlled by the TRQ1 and TRQ2 signals from the microprocessor. In assist operation, the idler gear turns clockwise (viewed from the front) during forward play and counterclockwise during reverse play.

2. Mechanism Drive System

The waveforms which drive the mechanism look rather complicated on an oscilloscope. If we break them down into the basic patterns which indicate separate operations, however, and display the combined result in tabular form, table 1 is the result. When the operations listed under "Mechanism Operations" are performed in the order specified (i.e. left to right), the operation "modules" listed under "Drive Sequence" are activated in the order shown (left to right). Figure 2 through 8 below illustrate the waveforms for the various modules.

Note: The polarity of the waveforms differs depending on the direction of tape travel and the type of operation. All durations are given in milliseconds [ms].

Mechanism Operations	Drive Sequence
PLAY → STOP	A → E → G
SEARCH → STOP	C → B → A
FF/REW → STOP	C → G
STOP → PLAY	A → D ₂
PLAY → SEARCH	A → D ₁
STOP → FF/REW	D ₁

Table 1: Drive Sequences for Representative Operations

■ Drive waveform for assist operation

A: While searching for target position

B: The motor reverses to absorb inertia for 30 ms when the heads are being raised and 70 when the heads are being lowered.

Note: The 5 ms gap between A and B is needed in order to move the tape to the center of the target area. The 50 ms period following B is for resetting the mechanism position. Assist operation is performed again if the position is not correct. In this case (only), B is 10 ms in duration. The (■) mark indicates the mechanism position double-check point.

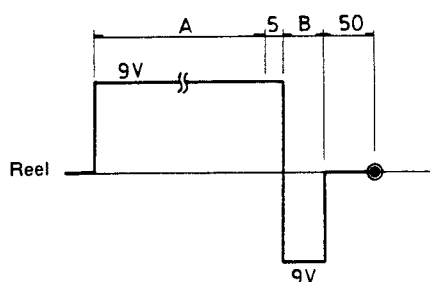


Figure 2: Module A

■ Drive waveform 1 for changing position of idler gear

If the capstan motor is turning when the reel drive signal is received, it is shut off.

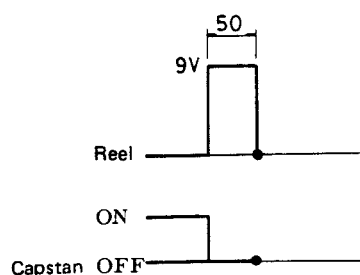


Figure 3: Module B

■ Drive waveform for brake

Attraction from the solenoid engages the brake. The final 10 ms gap is the pause before the next operation starts.




Figure 4: Module C

■ Reel drive waveform

(Used during fast forward, reverse and music search)

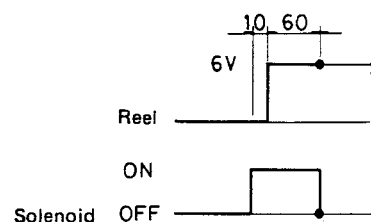


Figure 5: Module D1

■ Reel drive waveform

(Used during record and playback)

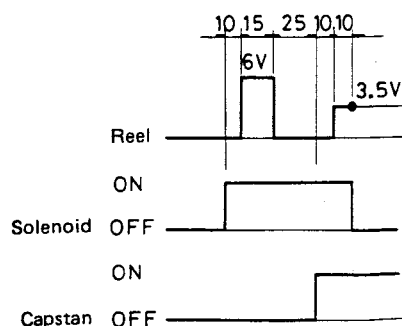


Figure 6: Module D2

■ Waveform for taking up tape slack

The reel drive voltage normally consists of 15 pulses (3.5V: on 5 ms, off 2 ms). The number of pulses is increased to 25 during double-speed operation.

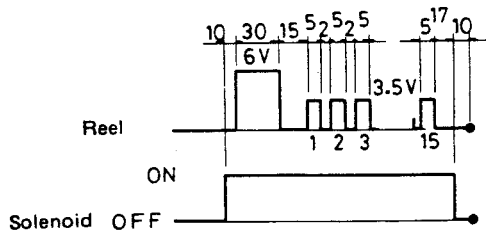


Figure 7: Module E

■ Drive waveform 2 for changing position of idler gear

The movement produced is the same as in module B. However, after the first 50 ms peak, the position of the mechanism is checked. If it is not in the stop position, module A is executed. The duration of assist reverse rotation is 10 ms in this case. The (■) mark indicates the mechanism position double-check point.

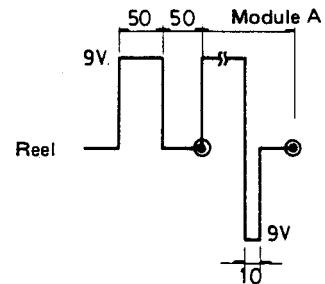


Figure 8: Module G


3. Initialization of the Mechanism

When power is initially turned on, there is no guarantee that the idler gear is in the assist position. Therefore, signals are issued to move the idler gear first to the left and then to the right, and the gear is secured in position B as shown in figure 1 above. Then modules A, E and G are

executed in succession to put the mechanism in the stop position.

Note: In this particular case, the number of pulses in module E is 25 (the same as during double-speed operation).

4. Mechanism Positioning Data

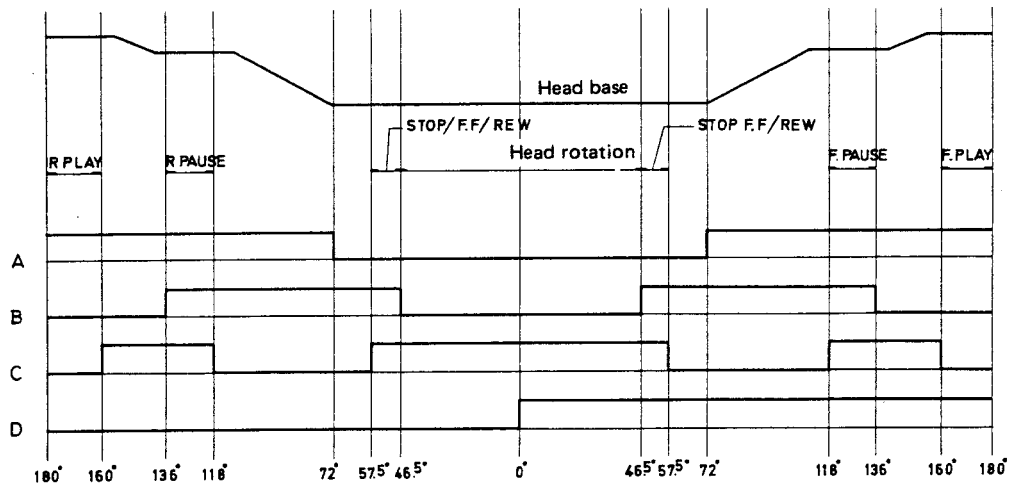


Note: The dotted lines in the positioning data indicate either "0V" or "switch on".

Figure 9: Mechanism Positions and Positioning Data

5. Microprocessor and Input Expander

Two input expanders (LC7800) are used to expend the number of inputs to the microprocessor. These ICs each have four 4-bit input ports (A0-3, B0-3, C0-3, D0-3). Four designation input signals are used to specify input ports: \overline{SA} , \overline{SB} , \overline{SC} , \overline{SD} . If one of the input signals is set to 0 logic, the input port designated by that signal is selected and that input signal is transferred to the output port ($O_0 - O_3$). \overline{INH} and \overline{INH} signals are used to differentiate expanders 1 and 2.

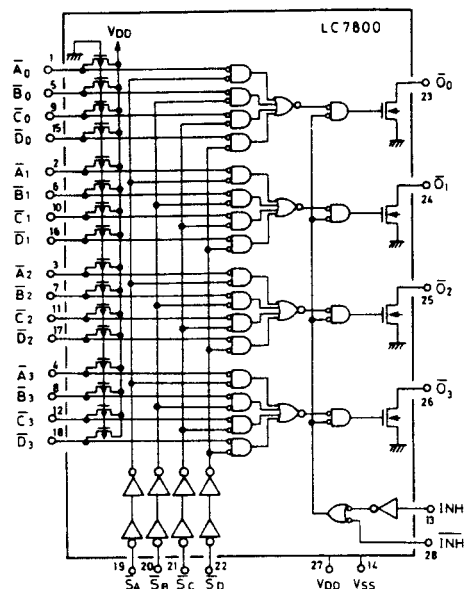


LC7800 equivalent circuit


μ PC1297CA (DOLBY HX PRO SYSTEM)

When the HX PRO is operation, by means of the recording signal coming from the recording head, a modulating oscillator voltage is applied to the absolute value detection circuit, and by means of the recording signal level peak detection value, the bias current is instantaneously controlled. At such time, by means of the CR integrated circuit, the frequency characteristic is maintained.


μ PC1297CA

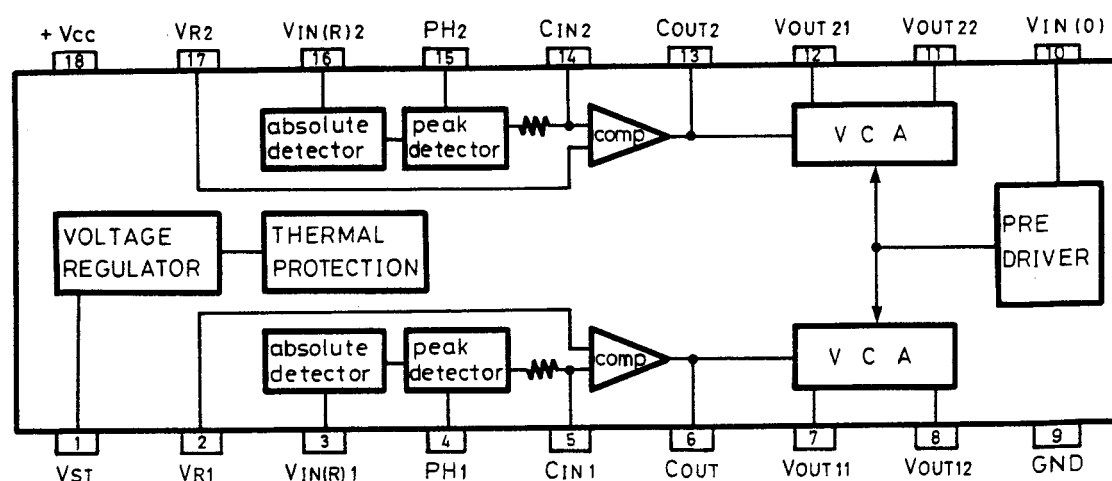






BLOCK DIAGRAM (AUDIO SECTION)

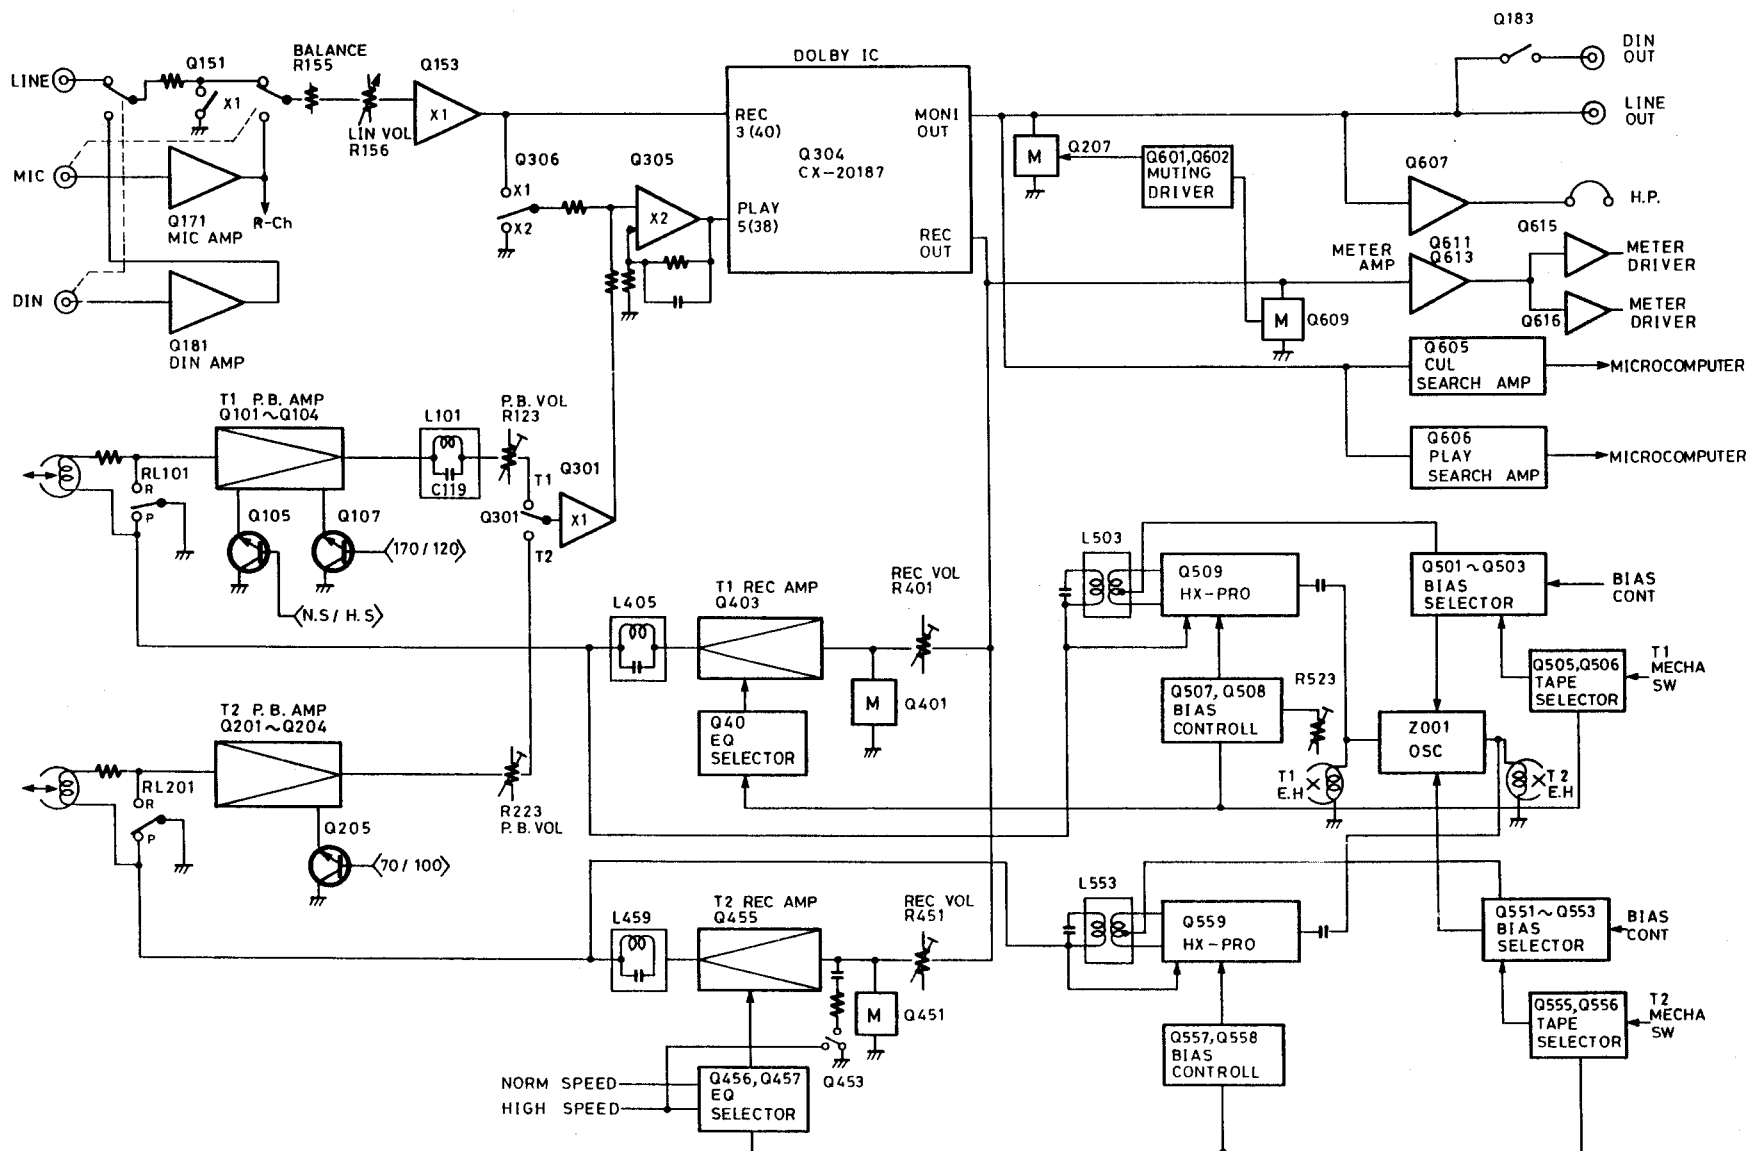

BLOCK DIAGRAM (CONTROL SECTION)

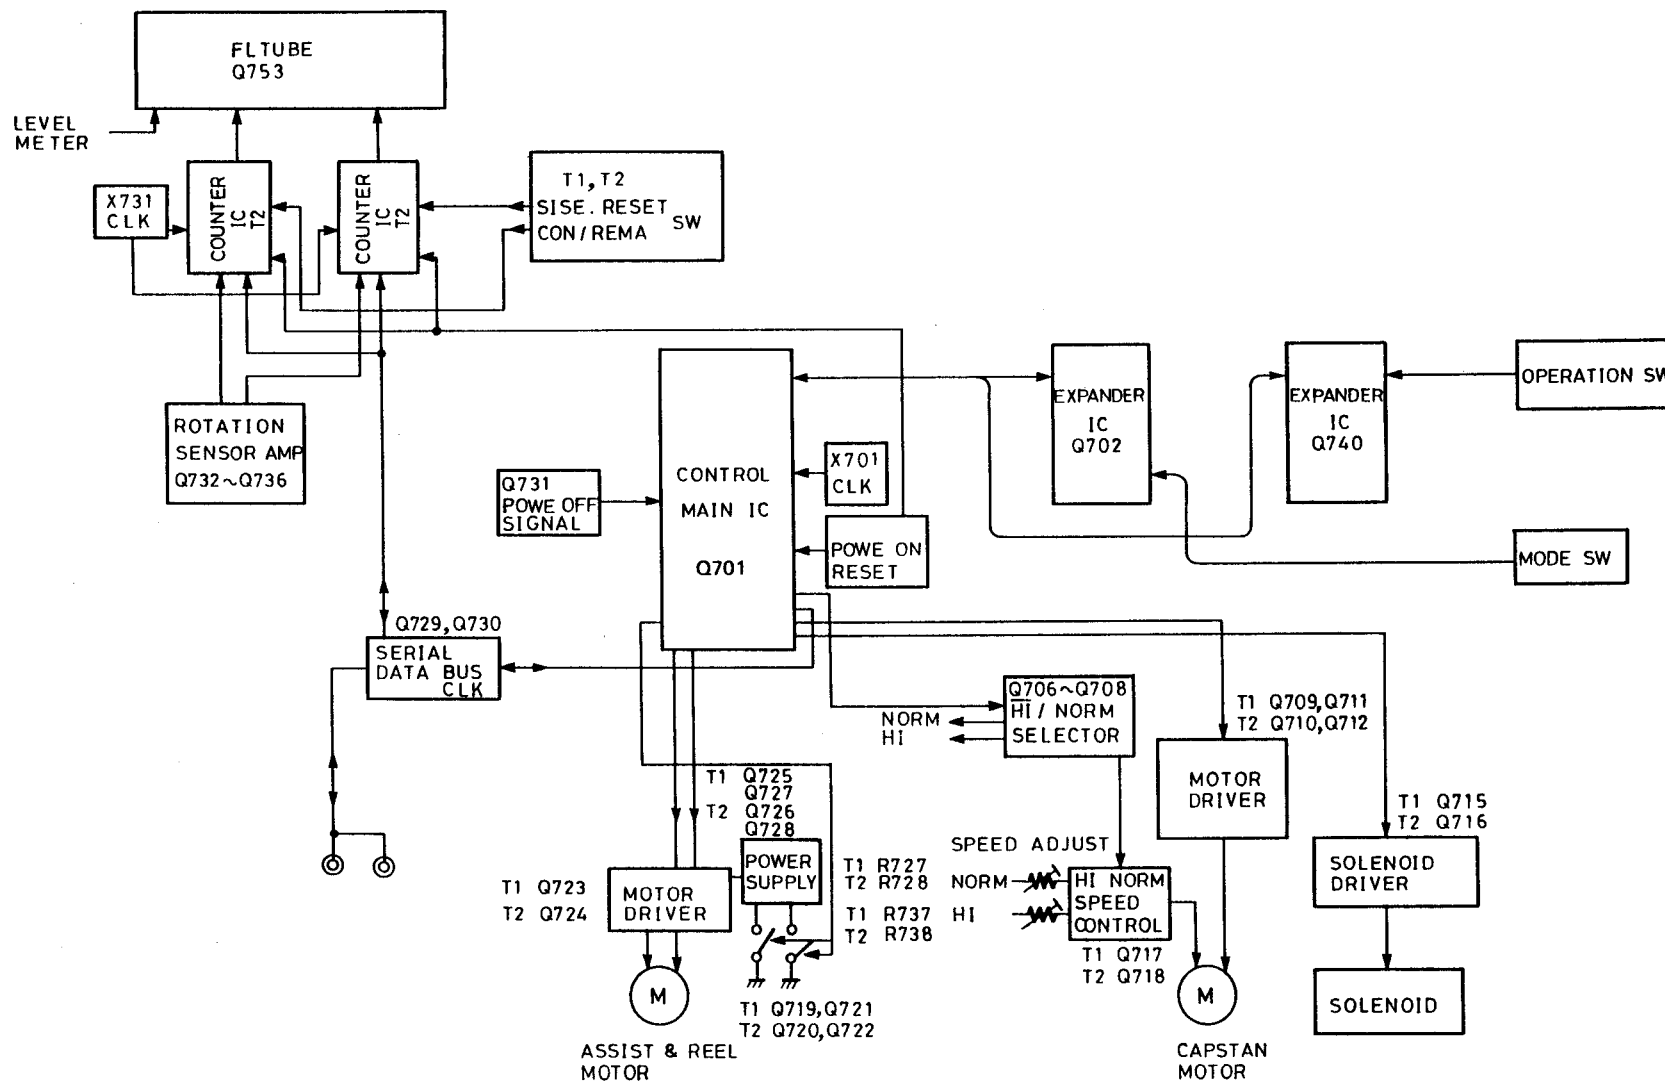


IC BLOCK DIAGRAM

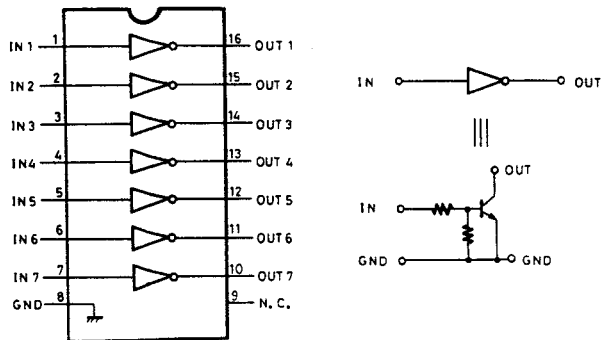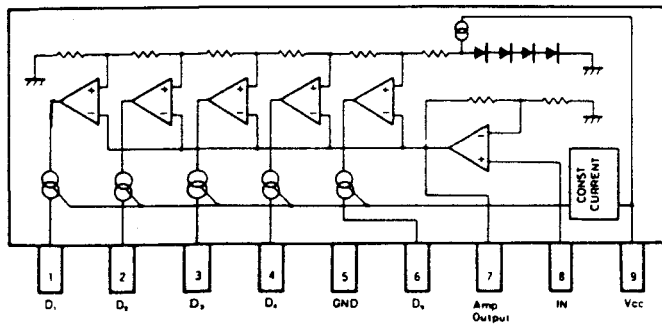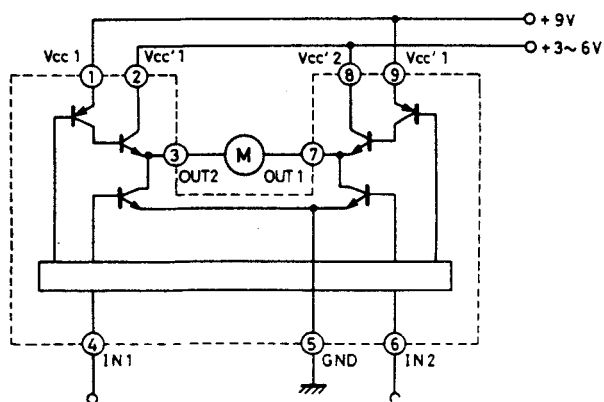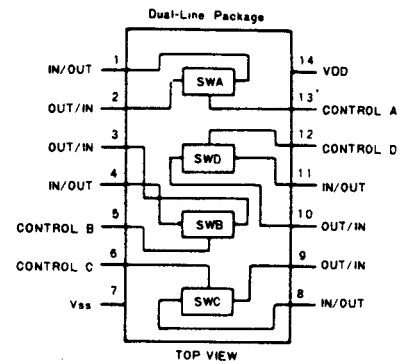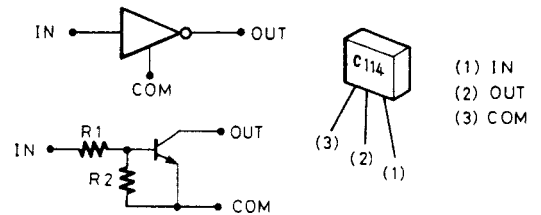BA6251 (REC AMP. EQ. SW)

BA6137 (METER AMP)

M54544AL (MOTOR DRIVE)

4066B or BU4066BP

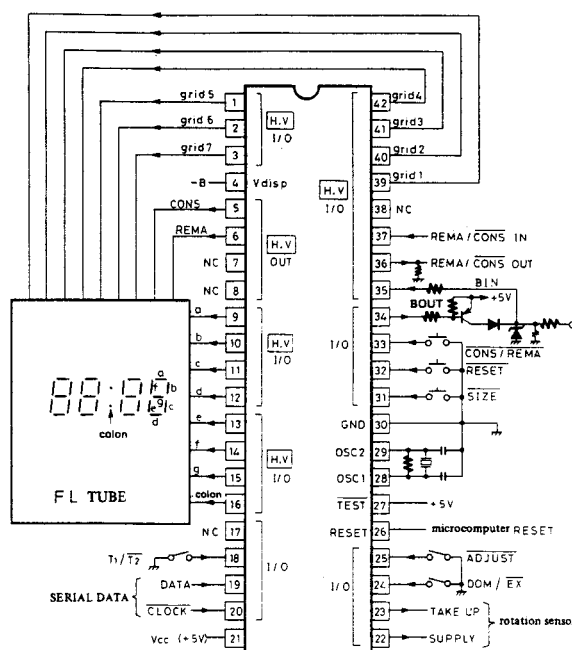**DTC144ES
DTC114YS (Digital transistor)**


	R 1	R 2
DTC 114 YS	10 K Ω	47 K Ω
DTC 144 ES	47 K Ω	47 K Ω

INPUT		OUTPUT		Remark
# 4	# 6	# 3	# 7	
L	L	OFF	OFF	—
H	L	H	L	FWD
L	H	L	H	REV
H	H	L	L	Brake



HD614128S-A41 (COUNTER)



Terminal Name and Function

Pin No.	Name	Function
1 ~ 3	Grid 5 ~ 7	FL tube grid (DIGIT) drive use output
4	V _{disp}	Input (FL tube use) for minus bias voltage to pin Nos. 1 ~ 3, 5, 6, 9 ~ 16, 39 ~ 42
5	CONS	FL tube CONS display use output (time lapse)
6	REMA	FL tube REMA display use output (time remaining)
9 ~ 15	a ~ g	FL tube segment drive use output
16	Colon	FL tube ":" drive use output
18	T ₁ /T ₂	Microcomputer T ₁ /T ₂ function selection input (With T ₂ , system I/O receiving)
19	DATA	Reck mechanism status input (8 bit serial data) from mechanism control micro-computer
20	CLOCK	Clock input for reading above DATA (DATA taken on pulse wave dropping)
21	V _{cc}	Microcomputer power source (+5V)
22	SUPPLY	Cassette mechanism tape feed side turning pulse input
23	TAKE UP	Cassette mechanism tape windup side turning PULSE INPUT
24	DOM/EX	Domestic/export setting use selector input (Tape size type selector use) Domestic: With power ON C46 → C54 → C60 → C80 → C90 → C120
25	ADJUST	Remaining time calculation buffer compensating value input (normally open, compensating ground)
26	RESET	Microcomputer system reset
27	TEST	Microcomputer internal test use port, normally connected to V _{cc}
28, 29	OSC1, OSC2	Microcomputer clock oscillator terminal
30	GND	Microcomputer power source (GND)
31	SIZE	Tape size selector input
32	RESET	Lapsed time reset input (When CONS displays, digits are □ : □ □)
33	CONS/REMA	Lapsed time ↔ remaining time selector input (toggle display)
34	BOUT	System bus output
35	BIN	System bus input
36	REMA/CONS OUT	Remaining time display/lapsed time display status output (when T ₂)
37	REMA/CONS IN	Remaining time display/lapsed time display status input (when T ₂)
39 ~ 42	Grid 1 ~ 4	FL tube grid (DIGIT) drive use output

BG-485G (DISPLAY TUBE)

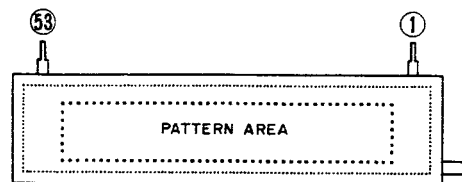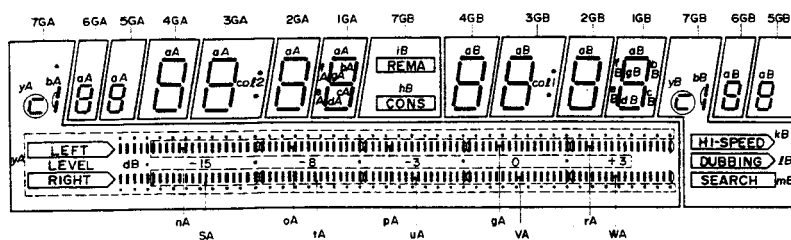


PIN CONNECTION

53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
F 2	F 2	N P	w A	v A	u A	t A	s A	r A	q A	p A	o A	n A	x A	g A	f A	e A	d A	c A	b A	a A	N P	N P	7 G A y A	6 G A	5 G A	4 G A	3 G A	2 G A	1 G A	x B	i B	h B	g B	f B	e B	d B	c B	b B	a B	7 G B y B	6 G B	5 G B	4 G B	3 G B	2 G B	1 G B	k B	j B	m B	N P	F 1	F 1


CX20187 (DOLBY N.R)

B/C	1	42	REC / PB
ON / OFF	2	41	IREF
LINE IN	3	40	LINE IN
Vcc	4	39	Vee
PB IN	5	38	PB IN
MPX OUT	6	37	MPX OUT
REC IN	7	36	REC IN
GND	8	35	GND
LINE OUT	9	34	LINE OUT
SSK	10	33	SSK
VF IN	11	32	VF IN
HPF H	12	31	HPF H
TCH2	13	30	TCH2
TCH1	14	29	TCH1
WT H	15	28	WT H
TCL2	16	27	TCL2
TCL1	17	26	TCL1
WT L	18	25	WT L
HPF L	19	24	HPF L
ANT S	20	23	ANT S
REC OUT	21	22	REC OUT

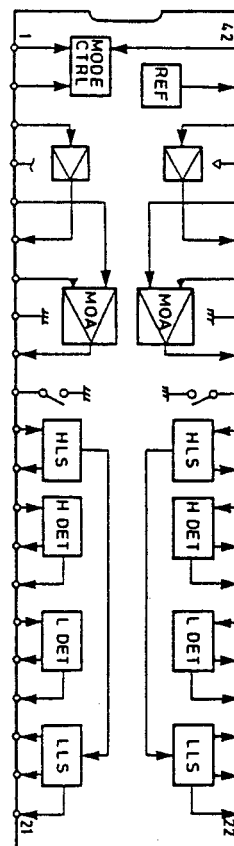

HD614088S-B53 (MICROCOMPUTER)

HD614088S B53

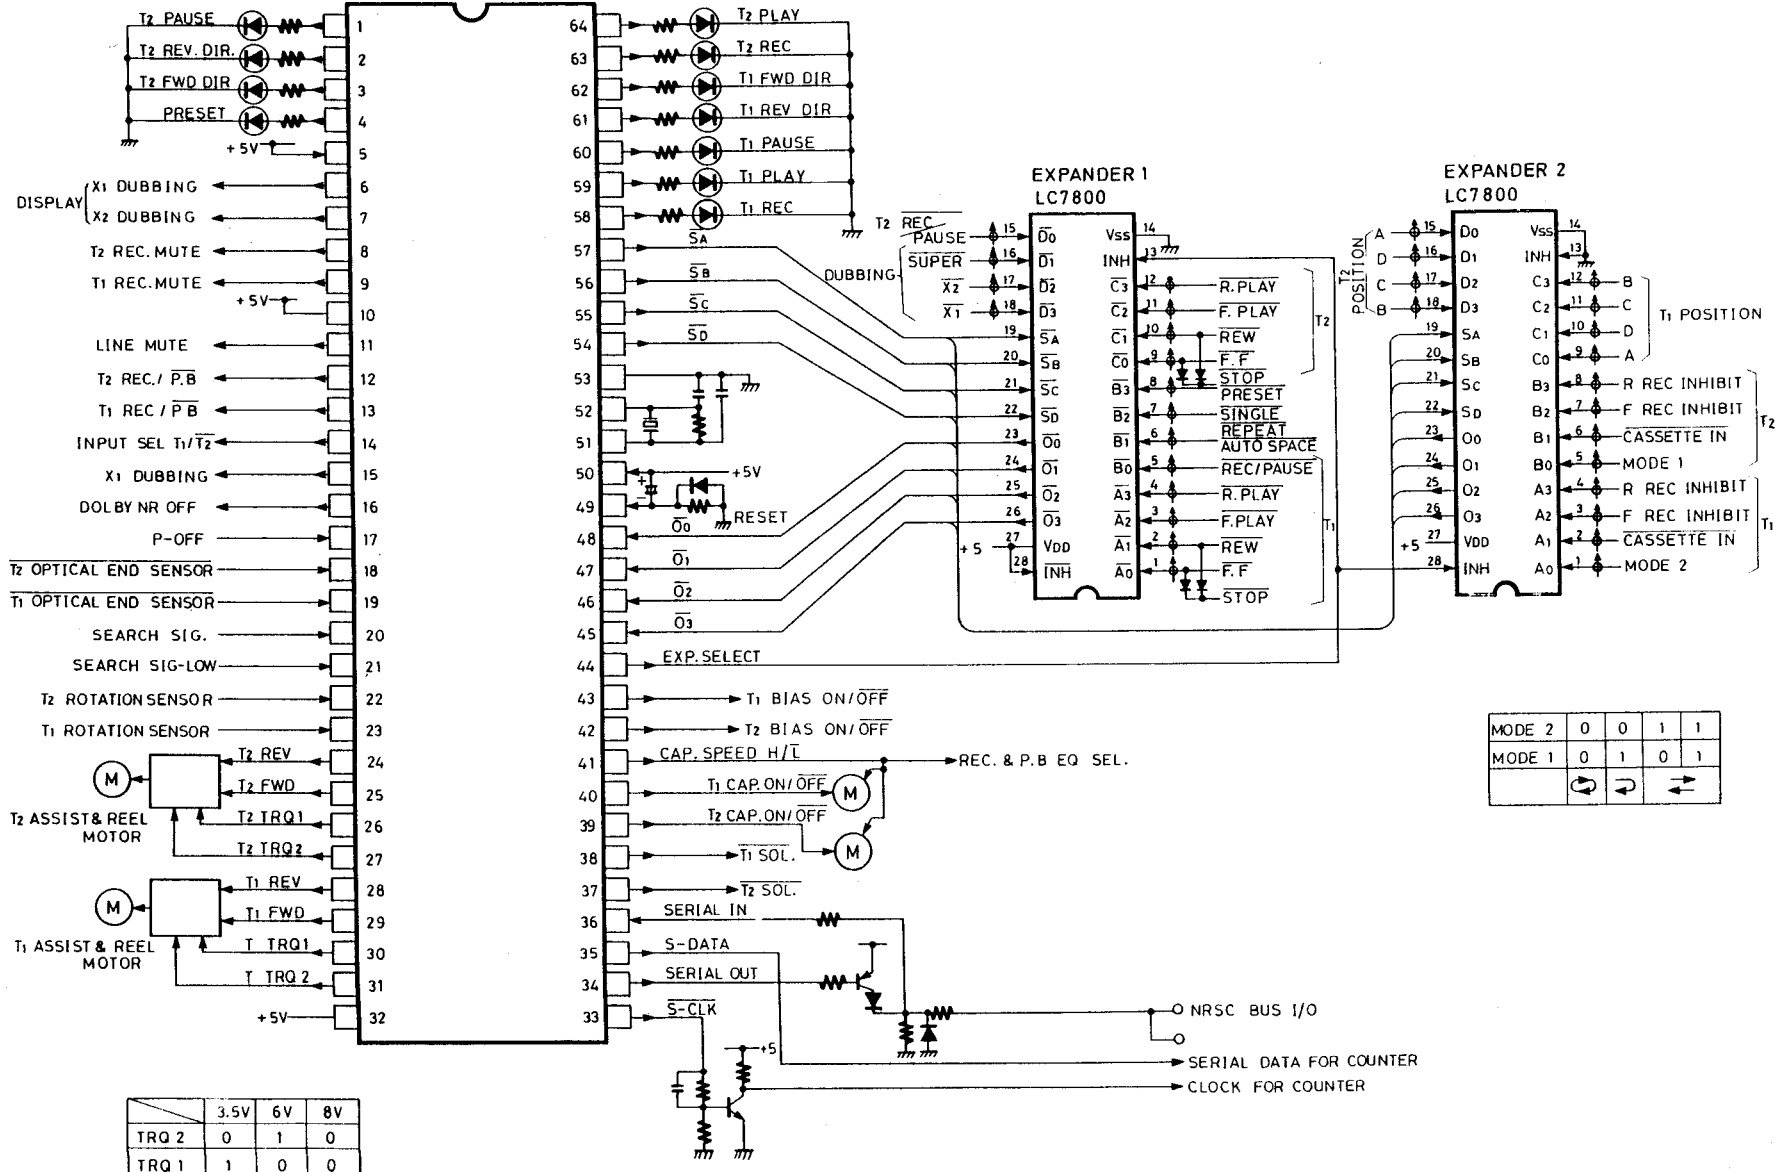


NAMES AND FUNCTIONS OF MICROCOMPUTER PORTS

Port No.	Name	Function
1	T2 PAUSE	T2 pause display output (permits direct drive of LED or fluorescent display).
2	T2 REV. DIR	T2 reverse direction display output.
3	T2 FWD. DIR	T2 forward direction display output.
4	PRESET	Preset display output for music search.
5	(NOT USED)	Not used; always connected to Vcc.
6	X1 DUBBING	Dubbing display output for fluorescent display.
7	X2 DUBBING	High-speed dubbing display output for fluorescent display.
8	T2 REC. MUTE	T2 rec. muting output.
9	T1 REC. MUTE	T1 rec. muting output.
10	(NOT USED)	Not used.
11	LINE MUTE	Line muting output.
12	T2 REC./P.B	T2 recording/playback head switching output.
13	T1 REC./P.B	T1 recording/playback head switching output.
14	INPUT SEL.	Output for switching the playback signal input. H indicates T1 and L indicates T2.
15	X1 DUBBING	This output is H for normal speed dubbing and L at all other times.
16	DOLBY NR OFF	Output to turn Dolby NR off.
17	P-OFF	Input signal indicating that power has been detected; halts mechanism.
18	T2 OPTICAL END SENSOR	T2 tape-end input triggered when leader tape is detected (negative logic).
19	T1 OPTICAL END SENSOR	T1 tape-end input triggered when leader tape is detected (negative logic).
20	SEARCH SIG.	Signal input from search amplifier used for music search.
21	SEARCH SIG-LOW	Signal input from low-speed amplifier used for single repeat operation.
22	T2 ROTATION SENSOR	T2 head rotation pulse input for end-of-tape detection.
23	T1 ROTATION SENSOR	T1 head rotation pulse input for end-of-tape detection.
24	T2 REV.	Together with the signal from pin #25, this output signal controls the rotational direction of the reel motor.
25	T2 FWD.	Together with the signal from pin #24, this output signal controls the rotational direction of the reel motor.
26	T2 TRQ1	Together with the signal from pin #27, this output signal controls the torque of the reel motor.
27	T2 TRQ2	Together with the signal from pin #26, this output signal controls the torque of the reel motor.
28	T1 REV.	Together with the signal from pin #29, this output signal controls the rotational direction of the reel motor.
29	T1 FWD.	Together with the signal from pin #28, this output signal controls the rotational direction of the reel motor.
30	T1 TRQ1	Together with the signal from pin #31, this output signal controls the torque of the reel motor.
31	T1 TRQ2	Together with the signal from pin #30, this output signal controls the torque of the reel motor.
32	Vcc	Power supply terminal.
33	S-CLK	Clock output signal for sending mechanism status data to the real time counter.
34	SERIAL OUT	NRSC code output.
35	S-DATA	Mechanism status data output signal which is sent to the real time counter.
36	SERIAL IN	NRSC code input.
37	T2 SOL.	Mechanism T2 solenoid drive output (negative logic).
38	T1 SOL.	Mechanism T1 solenoid drive output (negative logic).
39	T2 CAPSTAN	T2 capstan on/off control output.
40	T1 CAPSTAN	T1 capstan on/off control output.
41	CAP. SPEED	Capstan speed control output for both T1 and T2. L selects normal speed; H selects high speed.
42	T2 BIAS	T2 bias oscillator control output. H turns oscillator on.
43	T1 BIAS	T1 bias oscillator control output. H turns oscillator on.
44	EXP. SELECT	Output to specify expander 1 or 2.
45 ~ 48	00 ~ 03	Signal input from expanders.
49	RESET	Microprocessor system reset input.

Port No.	Name	Function
50	TEST	Microprocessor internal check input. H indicates "normal."
51, 52	OSC1, OSC2	Terminal for clock oscillator.
53	GND	Ground terminal.
54 ~ 57	Sd ~ Sa	Expander selector output.
58	T1 REC	T1 record display output (permits direct drive of LED or fluorescent display).
59	T1 PLAY	T1 play display output (permits direct drive of LED or fluorescent display).
60	T1 PAUSE	T1 pause display output (permits direct drive of LED or fluorescent display).
61	T1 REV. DIR	T1 reverse direction display output (permits direct drive of LED or fluorescent display).
62	T1 FWD. DIR	T2 forward direction display output (permits direct drive of LED or fluorescent display).
63	T2 REC	T2 record display output (permits direct drive of LED or fluorescent display).
64	T2 PLAY	T2 play display output (permits direct drive of LED or fluorescent display).

TAPE MECHANISM CONNECTION

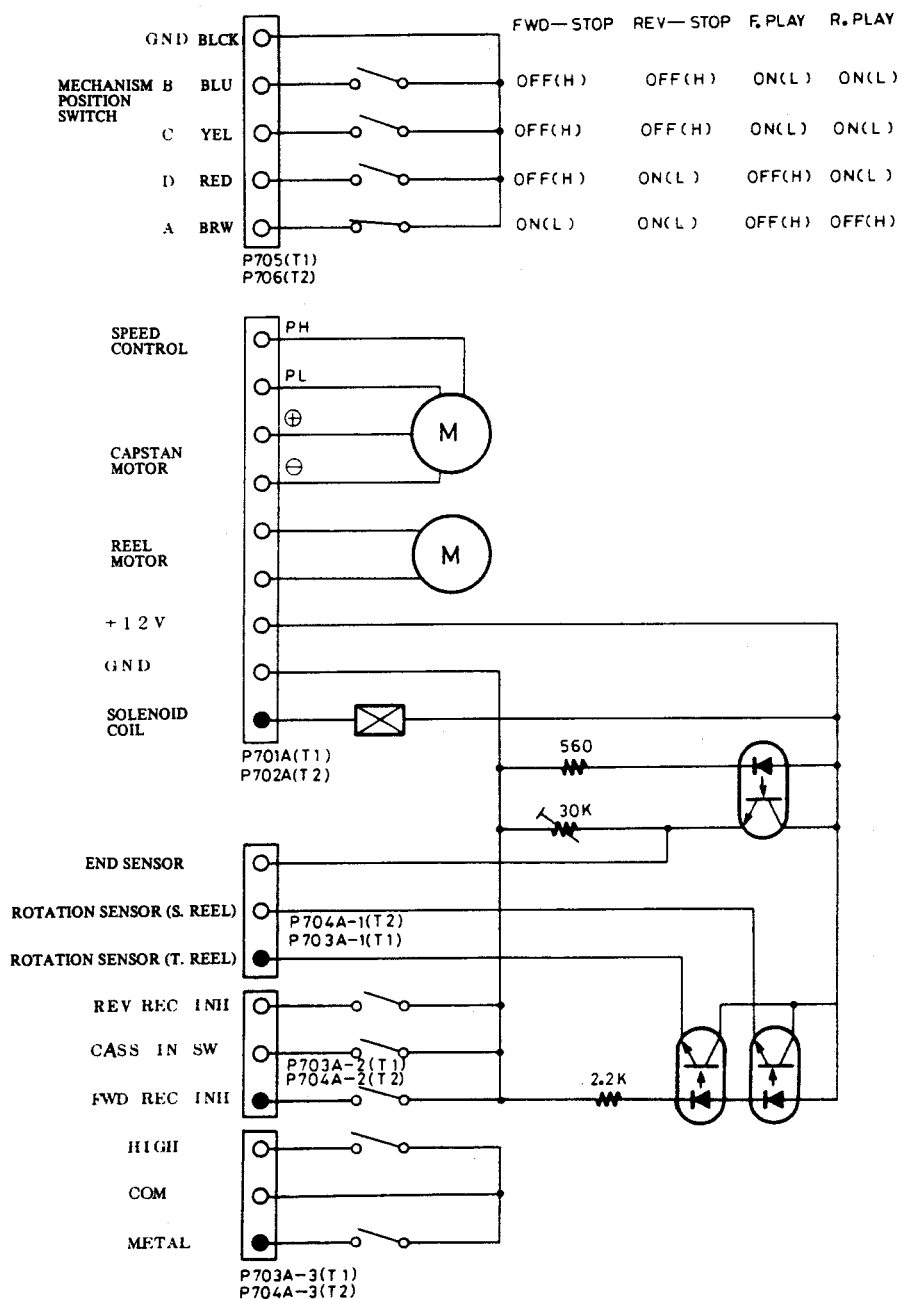

ADJUSTMENT PROCEDURES

PRECAUTIONS

- Before adjustment, clean the following parts with an alcohol moistened swab.
 - * record/playback head
 - * pinch roller
 - * erase head
 - * capstan
- Do not use magnetized screwdriver for adjustments.
- Demagnetize record/playback head with a head demagnetizer.

TEST EQUIPMENT/TOOLS REQUIRED:

Audio oscillator
 Digital frequency counter
 Oscilloscope
 Attenuator
 AC voltmeter
 Non-magnetic screw driver
 Test tapes
 VTT-658 : 10 KHz, -15dB
 MTT-111 : 3 kHz, -10dB
 MTT-150 : Dolby level calibration
 400Hz, tone 200nWb/m

Item		Connection of instrument	Line input	Test tape	Mode	Output indicator	Adjustment point	Adjust	Remarks
1	Tape speed	Frequency counter to LINE output terminal		MTT-111	PB	Frequency counter	T1 Normal R727 T1 High R737 T2 Normal R728 T2 High R738	3010 ± 5Hz 6020 ± 10Hz 3010 ± 5Hz 6020 ± 10Hz	High speed connect the TP-7 to GND
2	Head azimuth	AC voltmeter and oscilloscope to LINE output terminal		VTT-658	PB	AC voltmeter	Head azimuth screw	Maximum and same phase at channels L and R	fig. 1
3	Playback level	AC voltmeter to terminals TP-1 and TP-2		MTT-150	PB	AC voltmeter	T1 R123 (Ch.L) T1 R124 (Ch.R) T2 R223 (Ch.L) T2 R224 (Ch.R)	245mV	
4	OSC Block	AC voltmeter to R507 (T1) and R557 (T2)		T1, T2 METAL TAPE MX-C60	T1, T2 REC	AC voltmeter	Z001 T1 Coil T2 Coil	Maximum	
5	HX-PRO	AC voltmeter to terminals TP-1, TP-2, TP-3 and TP-4		T1, T2 METAL TAPE MX-C60	T1, T2 REC	AC voltmeter	T1 L503 (Ch.L) T1 L504 (Ch.R) T2 L553 (Ch.L) T2 L554 (Ch.R)	Maximum	Bias VR R523, R524 R573, R574 maximum
6	Bias current	fig. 2	1kHz, -20dB and 12kHz, -20dB	XL-II C-90	REC/PB	AC voltmeter	T1 R523 (Ch.L) T1 R524 (Ch.R) T2 R573 (Ch.L) T2 R574 (Ch.R)	Same level at REC/PB	Input VR maximum
7	Record level	fig. 2	1kHz	XL-II C-90	REC	AC voltmeter	Attenuator or AF OSC output	350mV	
					REC/PB	AC voltmeter	T1 R401 (Ch.L) T1 R402 (Ch.R) T2 R451 (Ch.L) T2 R452 (Ch.R)	Same level at REC/PB	
8	Reverse operation sensitivity	DC voltmeter to sockets P703-1 (T1) #1 P704-1 (T2) #1		TDK AD-120 Magnetic substance	FWD PB	DC voltmeter	Semi-fixed VR (T-1, T-2) on the mechanism P.C.B.	2 ~ 2.5V	

Blank tape

NORMAL ----- UD-1 C-90
 HIGH ----- XL-II C-90
 METAL ----- MX C-90

PLAY torque ----- 30 ~ 60 g/cm
 FF. REW torque ----- 70 ~ 140 g/cm
 Back tension ----- 2 ~ 5 g/cm

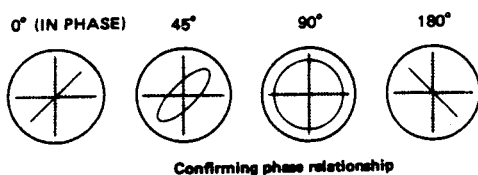
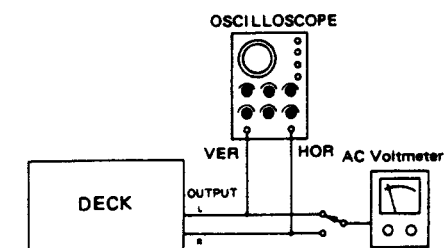
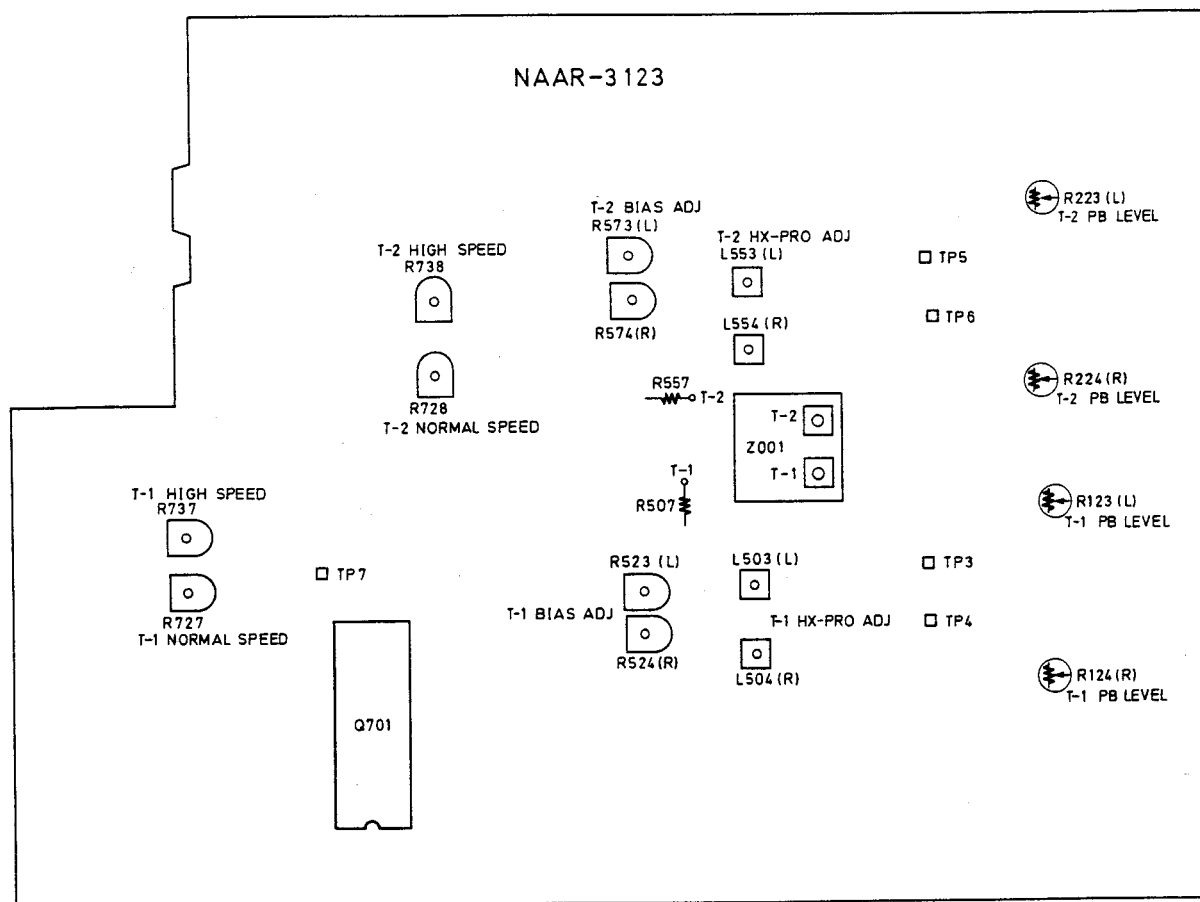


fig-1



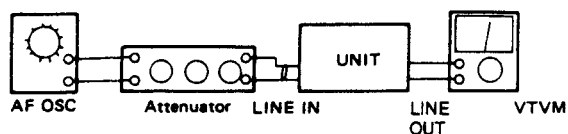


fig-2

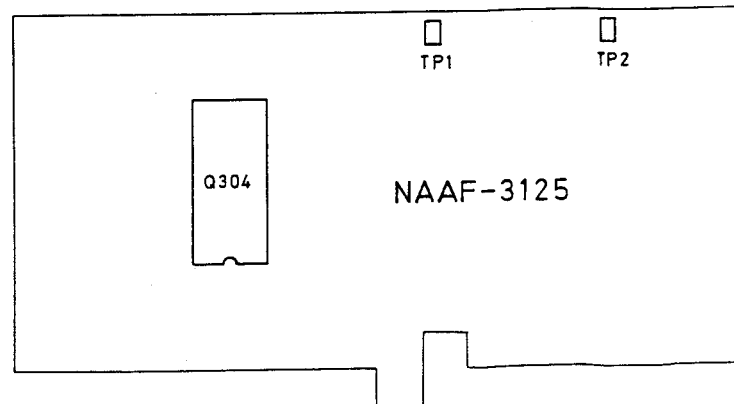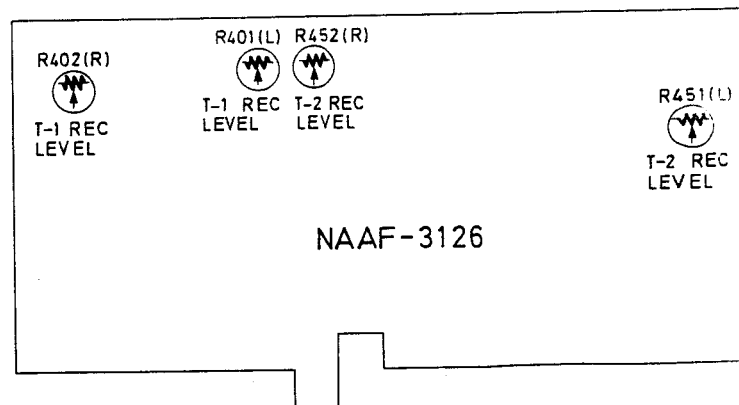

CHASSIS EXPLODED VIEW PART LIST

REF.NO.	PART NO.	DESCRIPTION
1	27110378	FRONT BRACKET AS
2	27273082	JOINT (EJECT)
3	28323149	KNOB (EJECT) L
4	28323150	KNOB (EJECT) R
5	28400282	DAMPER
6	27180314	SPRING (T1)
7	27180315	SPRING (T2)
8	28400339	FRAME AS (CASSETTE)
8-1	28400340	FRAME (CASSETTE)
8-2	27180272	SPRING (CA)
9	27190563	HOLDER (LED-5)
10	27130500	BRACKET (PT)
11	27270214A	SPACER
12	27115194-1	SIDE BRACKET
13	27121048	BACK PANEL (D)
	27121049	BACK PANEL (G)
	27121051	BACK PANEL (W)
14	27300750	BUSHING (CORD)
15	27273084	JOINT (POW)
16	27260084	SHAFT
17	27141158	BRACKET (FL)
18	28323151	KNOB (POW)
19	28323152	KNOB (MODE)
20	28323153	KNOB (RPT)
21	28323163	KNOB (DOLBY)
22	28184373	TOP COVER
22-1	28140798	CUSHION
23	27170243	BOTTOM BOARD
24	27175009A	LEG (S)
25	27190524	HOLDER
26	28400341A	CASSETTE LID AS (T1)
26-1	28400342	CASSETTE LID
26-2	28400343A	WINDOW (T1)
26-3	28400345	CASSETTE LID (T1)
26-4	28198688	FACET (DIR)
26-5	27180362	SPRING
27	28400344A	CASSETTE LID AS (T2)
27-1	28400342	CASSETTE LID
27-2	28400352A	WINDOW (T2)
27-3	28400345	CASSETTE LID (T1)
27-4	28198688	FACET (DIR)
27-5	27180362	SPRING
28	27141159	BRACKET
29	834230108	3TTS+10B(Ni)
30	1N027121A	FRONT PANEL

REF.NO.	PART NO.	DESCRIPTION
31	28323154	KNOB AS (AUTO)
32	28323156	KNOB AS (DUB)
33	28198689	FACET (HX)
34	28191437A	CLEAR PLATE
35	28400347	COSMETIC PLATE
36	28140805	CUSHION
37	834230088	3TTS+8B(Ni)
40	381430100	TAP-TIGHT SCREW 3TTW+10PBC
41	833430088	TAP-TIGHT SCREW 3TTP+8PBC
42	834430088	TAP-TIGHT SCREW 3TTS+8BBC
43	831130088	TAP-TIGHT SCREW 3TTW+8B
44	838440129	TAP-TIGHT SCREW 4TTB+12CBC
45	86414010	NUT FWN4+10FN
△ 46	2300265A	NPT-976D,POWER TRANSFORMER (D)
	2300266A	NPT-976G,POWER TRANSFORMER (G)
	2300267A	NPT-976DG,POWER TRANSFORMER (W)
	2300274A	NPT-976Q,POWER TRANSFORMER (Q)
△ P901	253112A	AS-UC-4,POWER SUPPLY CORD (D)
	253128B	AS-CEE,POWER SUPPLY CORD (G/W)
	253118	AS-SAA,POWER SUPPLY CORD (Q)
△ S902	25065123	NSS-1258P,VOLTAGE SELECTOR SWITCH (W)
Z1	244109A	CASSETTE DECK MECHANISM
Z2	244110A	CASSETTE DECK MECHANISM
U1	1N027523-1	NAAR-3123-1,MAIN PC BOARD ASS'Y (D)
	1N027523-1A	NAAR-3123-1A,MAIN PC BOARD ASS'Y (G/W)
U2	1N027524-1	NAAF-3124-1,MIC.VR.PC BOARD ASS'Y
U3	1N027525-1	NAAF-3125-1,DOLBY NR PC BOARD ASS'Y
U4	1N027526-1	NAAF-3126-1,REC AMP PC BOARD ASS'Y
U5	1N027527-1	NASW-3127-1
U6	1N027528-1	NASW-3128-1
U7	1N027536-1	NASW-3136-1
U8	1N027529-1	NADIS-3129-1,DISPLAY PC BOARD ASS'Y
U9	1N027530-1	NADIS-3130-1,TAPE-1 LED PC BOARD ASS'Y
U10	1N027531-1	NADIS-3131-1,TAPE-2 LED PC BOARD ASS'Y
U11	1N027532-1	NADIS-3132-1
U12	1N027533-1	NADG-3133-1,INPUT EXPANSION PC BOARD ASS'Y
U13	1N027534-1	NAETC-3134-1,SENSOR PC BOARD ASS'Y
U14	1N027535-1	NAETC-3135-1,POWER SUPPLY PC BOARD ASS'Y

NOTE: THE COMPONENTS IDENTIFIED BY MARK △ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

NOTE: (D): Only 120V model
(G): Only 220V model
(W): Only Universal model
(Q): Only 240V model

1
2
3
4
5



PRINTED CIRCUIT BOARD PART LIST

NAAR-3123-1 CIRCUIT NO.

	PART NO.	DESCRIPTION
	ICs	
Q181	222917	NJM-4558S-D (G/W)
Q509,Q559	222959	μ PC1297CA
Q605	222465	NJM-4558D
Q606	222681 or	IR-3702 or
	222695	LA-6324
Q607	222652	M5218L
Q701	22240089	HD-614088S-B53
Q702	222810	LC-7800
Q723,Q724	222953	M-54544AL
	Transistors	
Q101-Q104	2211896 or	2SC1815LL or
	2211406	2SC2240-BL
Q105-Q108	2211255 or	2SC1815GR or
	2210746	2SC945-A-P
Q151,Q152	2212794 or	2SD1468-R or
	2212795	2SD1468-S
Q183,Q184	2212304 or	2SK381-D or (G/W)
	2211945	2SK246-GR
Q185	221281	DTC114YS (G/W)
Q201-Q204	2211896 or	2SC1815LL or
	2211406	2SC2240-BL
Q205,Q206	2211255 or	2SC1815GR or
	2210746	2SC945-A-P
Q207,Q208	2212794 or	2SD1468-R or
	2212795	2SD1468-S
Q501	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q502	2201540	2SD947
Q503	221281	DTC114YS
Q504-Q506	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q507,Q508	221281	DTC114YS
Q551	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q552	2201540	2SD947
Q553	221281	DTC114YS
Q554-Q556	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q557,Q558	221281	DTC114YS
Q601	221281	DTC114YS
Q602	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q603,Q604	221281	DTC114YS
Q609,Q610	2211255 or	2SC1815GR or
	2210746	2SC945-A-P
Q703	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q704,Q705	221281	DTC114YS
Q706	221282	DTC144ES
Q707	2213090	DTA114YS
Q708,Q709	221281	DTC114YS
Q710	221281	DTC114YS
Q711,Q712	2212853,	2SB1068-K,
	2212855,	2SB1068-U,
	2212845 or	2SB598-E or
	2212846	2SB598-F

CIRCUIT NO.

Q713,Q714	2213090	DTA114YS
Q715,Q716	2213170	2SD1809
Q717,Q718	2212304 or	2SK381-D or
	2211945	2SK246GR
Q719,Q720	221282	DTC144ES
Q721,Q722	221282	DTC144ES
Q725,Q726	2211255 or	2SC1815GR or
	2210746	2SC945-A-P
Q727,Q728	2201285 or	2SD882-Q or
	2201286	2SD882-P
Q729,Q731	2211455 or	2SA1015-GR or
	2212495	JA101Q
Q730	2211255 or	2SC1815GR or
	2210746	2SC945-A-P
	Diodes	
D101	223163	1SS133
D104	223150,	US1040, (G/W)
	223124 or	1S2473 or
	223145	1S2076TD
D105,D106	223163	1SS133 (G/W)
D501	223163	1SS133
D502	2243253,	MTZ-15C,
	2239673 or	RD15E-B3 or
	224651503	HZ-15E-B3
D503	223150,	US1040,
	223124 or	1S2743 or
	223145	1S2076TD
D504,D505	223163	1SS133
D509	223163	1SS133
D551	223163	1SS133
D552	2243253,	MTZ-15C,
	2239673 or	RD15E-B3 or
	224651503	HZ-15E-B3
D553,D554	223163	1SS133
D555-D559	223150,	US1040,
	223124 or	1S2473 or
	223145	1S2076TD
D601	223163	1SS133
D602-D604	223150,	US1040,
	223124 or	1S2473 or
	223145	1S2076TD
D605	2243152	MTZ-5.6B
	2239472 or	RD5.6E-B2 or
	224650562	HZ-5.6E-B2
D606,D607	223163	1SS133
D608,D609	223163	1SS133
D701	223163	1SS133
D703,D704	223150,	US1040,
	223124 or	1S2473 or
	223145	1S2076TD
D705-D707	223163	1SS133
D708	2243151,	MTZ-5.6A,
	2239471 or	RD5.6E-B1 or
	224650561	HZ-5.6E-B1
D709,D710	223150,	US1040,
	223124 or	1S2473 or
	223145	1S2076TD
D912	2241291 or	RD3.3EB1 or
	224650331	HZ-3.3E-B1

PRINTED CIRCUIT BOARD PART LIST

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Coils				
L101,L102	231091	NCH-2139	R737,R738	5215044	N08HR 5KBC
L501,L502	231077 or	NCH-2125 or	R739,R740	4000115	LT3600 1/4S 1.8K
	231025	NCH-1064	R767	49163392404	3.9k × 4,1/10W,NETWORK
L503,L504	231127	NCH-4183	R768	49163392412	3.9k × 12,1/10W,NETWORK
L551	231077 or	NCH-2125 or		Plugs	
	231025	NCH-1064	P101	25055102	NPLG-5P86
L553,L554	231127	NCH-4183	P105-P107	25055133	NPLG-3P117
Z001	231113	NOB-037	P201	25055102	NPLG-5P86
X701	3010118	CSA-3.00MG	P301	25055065	NPLG-5P51
	Capacitors		P302	25055047	NPLG-12P35
C105,C106	392880337T	3.3 μ F50V,LL	P401	25055066	NPLG-7P52
C111,C112	354741009T	10 μ F16V,ELECT.	P402	25055067	NPLG-9P53
C113,C114	354742209T	22 μ F16V,ELECT.	P501,P551	25055100	NPLG-3P84
C123,C124	354744709T	47 μ F16V,ELECT.	P601	25055148	NPLG-4P132
C181,C182	354741009T	10 μ F16V,ELECT. (G/W)	P602,P604	25055133	NPLG-3P117
C185,C186	354780229T	2.2 μ F50V,ELECT. (G/W)	P705,P706	25055135	NPLG-5P119
C187,C188	354741009T	10 μ F16V,ELECT. (G/W)	P707	25055149	NPLG-5P133
C203,C204	392880337T	3.3 μ F50V,LL	P709	25055147	NPLG-3P131
C209,C210	354741009T	10 μ F16V,ELECT.	P710,P711	25055187	NPLG-6P171
C211,C212	354742209T	22 μ F16V,ELECT.	P712	25055183	NPLG-2P167
C217,C218	354744709T	47 μ F16V,ELECT.	P713	25055258	NPLG-6P241
C501,C502	354744709T	47 μ F16V,ELECT.	P714,P716	25055183	NPLG-2P167
C505	354780479T	4.7 μ F50V,ELECT.	P723	25045172	HSJ-1003-01-020
C506	354722219S	220 μ F 6.3V,ELECT.	P724	25055146	NPLG-2P130
C509,C510	370131814	180PF 100V,APS		Socket	
C511,C512	370131014	100PF 100V,APS	P104	25050064	NSCT-5P18,DIN (G/W)
C521,C522	354741009T	10 μ F16V,ELECT.	P701A	2000759	NSAS-18P715
C551	354744709T	47 μ F16V,ELECT.	P702A	2000740	NSAS-18P696
C552	354780479T	4.7 μ F50V,ELECT.	P703A	2000761	NSAS-18P717
C556	354722219T	220 μ F 6.3V,ELECT.	P704A	2000762	NSAS-18P718
C559,C560	370131814	180PF 100V,APS	P911A	2000760A	NSAS-12P716
C561,C562	370131014	100PF 100V,APS	P912A	2000398	NSAS-12P357
C571,C572	354741009T	10 μ F16V,ELECT.		Relay	
C573,C574	354742209T	22 μ F16V,ELECT.	RL101,RL201	25065174	NRL2P1A-DC12-09
C601,C603	354780479T	4.7 μ F50V,ELECT.		Switch	
C602	354744709T	47 μ F16V,ELECT.	P901	25035559	NPS-111L521P,PUSH
C604,C605	354780109T	1 μ F50V,ELECT.		Misellaneous	
C606	354782299T	0.22 μ F50V,ELECT.		25060092	NTM-1S33,TERMINAL
C607	354741009T	10 μ F16V,ELECT.		27160029-1	RAD-07B,RADIATOR
C609	354786899T	0.68 μ F50V,ELECT.		82143006	3P+6FNBC,SCREW
C610-C614	354741009T	10 μ F16V,ELECT.		27300243	WS-2W,CLAMP
C703	354780229T	2.2 μ F50V,ELECT.		27300601	SB-1925,COVER (G/W)
C704	354741009T	10 μ F16V,ELECT.	P102	25045142	NPJ-4PDBL55
C711,C712	354742219T	220 μ F16V,ELECT.			
C715	354744709T	47 μ F16V,ELECT.			
C725	354741009T	10 μ F16V,ELECT.			
C901	3500065A	0.01 μ F400VAC,IS			
	Resistors				
R123,R124	5210122	N06HR 50KBC			
R223,R224	5210122	N06HR 50KBC			
R523,R524	5215044	N08HR 5KBC			
R573,R574	5215044	N08HR 5KBC			
R725,R726	441722704	27 Ω ,2W,OXIDE-FILM			
R727,R728	5215044	N08HR 5KBC			
R731-R734	4000112,	TD5-A090D,			
	4000118 or	TSD-090 or			
	4000119	SDT-09,THERMISTOR			

NOTE

G : Only 220V model

W : Only Universal model

PRINTED CIRCUIT BOARD PART LIST

NAAF-3124-1			NAAF-3126-1		
CIRCUIT NO.	PARTS NO.	DESCRIPTION	CIRCUIT NO.	PARTS NO.	DESCRIPTION
Q153,Q171	Ics		P301	Socket,Plug	
	222811 or	NJM4558-DD or		25050130	NSCT-5P32
	222502	NJM4558-DX	P302	25050219	NSCT-12P47
			P303,P304	25055317	NPLG-3P300
C171	Capacitors		NAAF-3126-1	PARTS NO.	DESCRIPTION
	354783399S	0.33 μ F50V,ELECT.			
C173	354780109S	1 μ F50V,ELECT.	CIRCUIT NO.	Ics	
C174,C175	354741009S	10 μ F16V,ELECT.			
	Resistors		Q403	222921 or	BA4558 or
				222465	NJM-4558D
R155	5104213	N09R250KW15F,VARIABLE	Q404	222918	BA6251
R156	5104214	N09R2L50kA15F,VARIABLE	Q455	222808	M5218P
			Q456	222919	TD-62554S
	Miscellaneous		Q457,Q458	222918	BA6251
P103	25045130	HLJ4308-01-010,MIC,JACK		Transistors	
P105A	2000521	NSAS-6P477,SOCKET	Q401,Q402	2212794 or	2SD1468-R or
P106A	2000522	NSAS-6P478,SOCKET		2212795	2SD1468-S
P107A	2000428	NSAS-6P387,SOCKET	Q451,Q452	2212794 or	2SD1468-R or
P601A	2000754	NSAS-8P710,SOCKET		2212795	2SD1468-S
P602A	2000524	NSAS-6P480,SOCKET	Q453,Q454	2211255 or	2SC1815GR or
P603	25045187	HLJ0541-01-010,HEADPHONE		2210746	2SC945-A-P
S601	25030295	NRSF-223-15MP,SWITCHS,DOL.		Diodes	
	27141160A	BRACKET(VR)		223163	1SS133
NAAF-3125-1			D506-D508		
CIRCUIT NO.	PARTS NO.	DESCRIPTION		Coils	
				231086,	NCH-2134,
Q301	222933 or	BU-4066B or	L401,L402	24606070 or	NCH1008 or
	222840661	4066B		231041	NCH2081
Q302	222917	NJM-4558S-D	L403,L404	231083,	NCH-2131,
Q304	222999	CX-20187		24606080 or	NCH-1022 or
Q305	222917	NJM-4558S-D		231038	NCH-2078
Q306	222933	BU-4066B	L405,L406	233314	NCH-2097
	222840661	4066B	L451,L452	231086,	NCH-2134,
				24606070 or	NCH1008 or
	Transistors			231041	NCH2081
Q303	221282	DTC144ES	L453,L454	231083,	NCH-2131,
Q307	221282	DTC144ES		24606080 or	NCH-1022 or
				231038	NCH-2078
	Diodes		L455,L456	231080,	NCH-2128,
D931,D932	2243183 or	MTZ-7.5C or		233191 or	NCH-1036 or
	2239533	RD7.5E-B3		231035	NCH-2075
			L457,L458	231083,	NCH-2131,
L301,L302	Coils			24606080 or	NCH-1022 or
	233313 or	NMC6048 or		231038	NCH-2078
	233306	NMC6043	L459,L460	233314	NCH-2097
L303,L304	233353 or	NMC-2058 or		Capacitors	
	233382	NMC-2069		354741009T	10 μ F16V,ELECT.
			C401,C402	354781099T	0.1 μ F50V,ELECT.
C301-C304	352980226S	2.2 μ F 50V,NP	C403,C404	354780479T	4.7 μ F50V,ELECT.
C305,C306	352950476S	4.7 μ F 25V,NP	C405,C406	354741009T	10 μ F16V,ELECT.
C327-C330	354780479T	4.7 μ F50V,ELECT.	C453,C454	354781099T	0.1 μ F50V,ELECT.
C331,C332	354741009T	10 μ F16V,ELECT.	C455,C456	354780479T	4.7 μ F50V,ELECT.
C335	354780479T	4.7 μ F50V,ELECT.	C457,C458		
C931,C932	354741019T	100 μ F16V,ELECT.		Resistors	
C933,C944	354744709T	47 μ F16V,ELECT.	R401,R402	5215033 or	N08HR 150KBC or
				5215013	N08HR 100KBA
			R451,R452	5215033 or	N08HR 150KBC or

PRINTED CIRCUIT BOARD PART LIST


CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	5215013	N08HR 100KBA	P604A	2000652	NSAS-6P608
	Miscellaneous		P707A	2000649	NSAS-10P605
P401	25050132	NSCT-7P34,SOCKET	P708A	2000798	NSAS-10P754
P402	25050217	NSCT-9P45,SOCKET	P709A	2000600	NSAS-6P556
P403,P404	25055317	NPLG-3P300,PLUG	P724A	2000781	NSAS-4P737
NASW-3127-1				Plug	
CIRCUIT NO.	PART NO.	DESCRIPTION	P721	25055150	NPLG-6P134
	Diodes			Holder	
D721-D724	223163	1SS133		27190564	HOLDER(FL)
	Switch		NADIS-3130-1		
S701	25065325	NSS-23128	CIRCUIT NO.	PART NO.	DESCRIPTION
S702	25035548	NPS-111S510,PUSH		Leds	
S703-S706	25035548	NPS-111S510,PUSH	D731	225192	GL1NG1
S707	25035570	NPS-111S532,PUSH	D732,D733	225190	GL1PR1
S708-S712	25035548	NPS-111S510,PUSH		Socket	
S713-S719	25035570	NPS-111S532,PUSH	P710A	2000739	NSAS-12P695
S720	25035399	NPS-122L364,PUSH			
	Socket		NADIS-3131-1		
P719A	20004782	NSAS-14P738	CIRCUIT NO.	PART NO.	DESCRIPTION
P720A	2000603	NSAS-12P559		Leds	
P721A	2000758	NSAS-12P714	D736	225192	GL1NG1
			D737,D738	225190	GL1PR1
			D739,D740	225192	GL1NG1
NASW-3128-1				Socket	
CIRCUIT NO.	PART NO.	DESCRIPTION	P717A	2000738A	NSAS-12P694
	Switch				
S721-S723	25035548	NPS-111S510,PUSH	NADIS-3132-1		
	Socket		CIRCUIT NO.	PART NO.	DESCRIPTION
P722A	2000515	NAAS-8P471		Leds	
			D741	225192	GL1NG1
NADIS-3129-1				Socket	
CIRCUIT NO.	PART NO.	DESCRIPTION	P716A	2000736	NSAS-4P692
	Ics			Holder	
Q611,Q612	22240087 or	BA6137 or		27190566	HOLDER(LED-1)
	22240088	LB1423N			
Q615	222687	LB1241			
Q751,Q752	22240084	HD614128S-A41	NADG-3133-1		
	Transistors		CIRCUIT NO.	PART NO.	DESCRIPTION
Q613,Q614	2212600	DTA124ES		Ic	
Q754,Q755	2211255 or	2SC1815GR or	Q740	222810	LC7800
	2210746	2SC945AP		Capacitors	
	Display tube		C726	354741009T	10 μ F16V,ELECT.
Q753	212049	BG-485G		Resistors	
	Xtal		R801	49163392404	3.9k \times 4,1/10W,NETWORK
X731	3010118 or	CSA3.00MG or	R802	49163392412	3.9k \times 12,1/10W,NETWORK
	3010129	PRS-3.00RM03		Socket	
	Capacitors		P713A	25050302	NSCT-6P129
C615,C616	354741009T	10 μ F16V,ELECT.		Plugs	
C733	354741009T	10 μ F16V,ELECT.	P719	25055229	NPLG-7P213
C734	354761009T	10 μ F35V,ELECT.	P720	25055228	NPLG-6P212
	Socket				

PRINTED CIRCUIT BOARD PART LIST


CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
P722	25055226	NPLG-4P210		Resistors	
P717,P718	25055317	NPLG-3P300	R901	442524794	RS1/2WBJ 0.47 Ω ,OXIDE-FILM
NAETC-3134-1			R902	442520224	RS1/2WBJ 2.2 Ω ,OXIDE-FILM
CIRCUIT NO.	PART NO.	DESCRIPTION	R903	442524714	RS1/2WBJ 470 Ω ,OXIDE-FILM
Q736	222740045	74HC04P	R904	441723904	RS 2 WBJ 39 Ω , OXIDE-FILM
Q737	222465	NJM4558D	R908	442520104	RS1/2WBJ 1.0 Ω ,OXIDE-FILM
	Transistors			Plugs	
Q732-Q735	2211255 or 2210746	2SC1815GR or 2SC945AP	P911,P912	25055136	NPLG-6P120
	Diodes			Miscellaneous	
D711,D712	223150, 223124 or 223145	US1040, 1S2473 or 1S2076TD		27160271-1	RAD-68B,RADIATOR
	Capacitors			27160029	RAD-07,RADIATOR
C716,C717	352982296S	0.22 μ F50V,NP.		82143006	3P+6FN(BC),SCREW
C722,C723	354741009T	10 μ F16V,ELECT	NASW-3136-1	PART NO.	DESCRIPTION
	Plugs		CIRCUIT NO.	Switch	
P703-1,P704-1	25055133	NPLG-3P117	S724	25035548	NPS-111S510,PUSH
P708	25055149	NPLG-5P133		Socket	
P715	25055323	NPLG-9P306	P712A	2000736	NAAS-4P692
NAETC-3135-1					
CIRCUIT NO.	PART NO.	DESCRIPTION			
	Ics				
Q901	222780122	78M12			
Q902	222790122	79M12			
Q905	222780052	78M05			
	Transistors				
Q903	2201275 or 2201276	2SB772P or 2SB772Q			
Q904	2201285 or 2201286	2SD882P or 2SD882Q			
	Diodes				
D901-D904	223894	1N4002F			
D905-D907	223891F	RL152			
D908,D909	223163	1SS133			
D910	2243242, 2239652 or 224651302	MTZ13B, RD13EB2 or HZ13EB2			
	Capacitors				
C902,C903	354751029S	1000 μ F25V,ELECT.			
C904	354781099T	0.1 μ F50V,ELECT.			
C905	354780109T	1 μ F50V,ELECT.			
C906	354751029S	1000 μ F25V,ELECT.			
C907,C908	354744709T	47 μ F16V,ELECT.			
C909	3504211S	22000 μ F25V,ELECT.			
C910	354782299T	0.22 μ F50V,ELECT.			
C911	354781099T	0.1 μ F50V,ELECT.			
C912-C914	354780479T	4.7 μ F50V,ELECT.			

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE


NCAR-3123

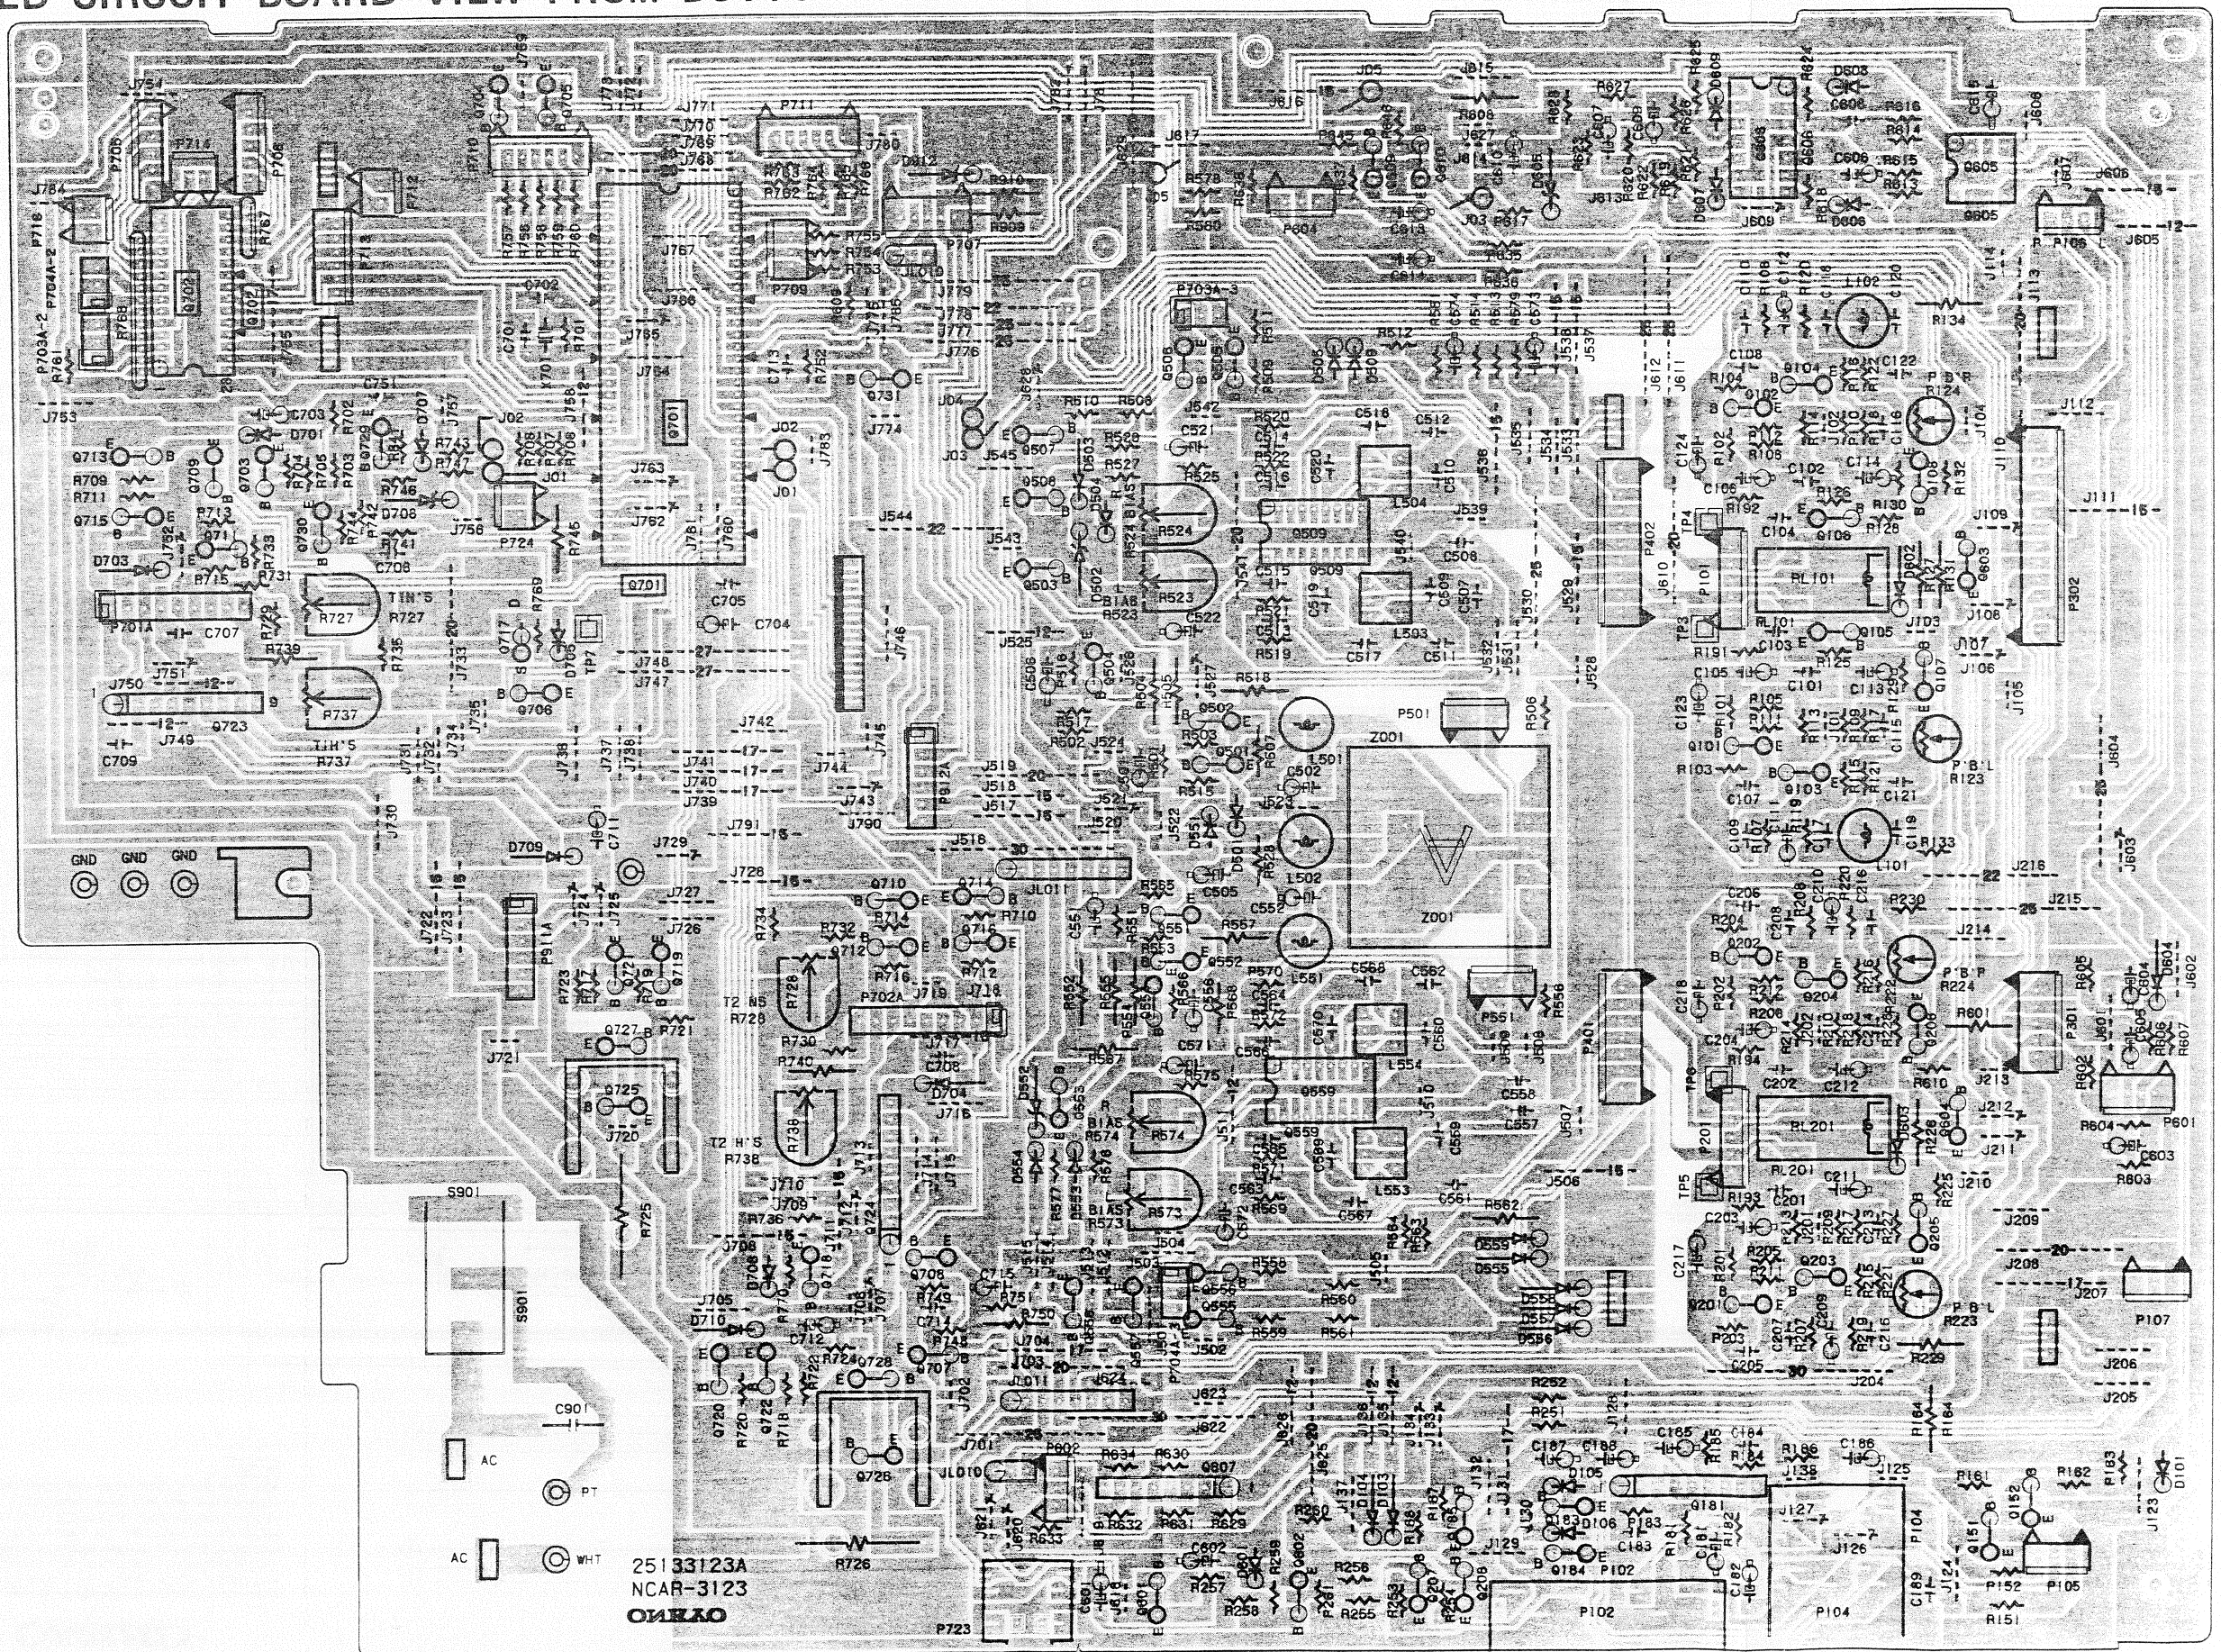

SCHEMATIC DIAGRAM (AUDIO SECTION) 1/3

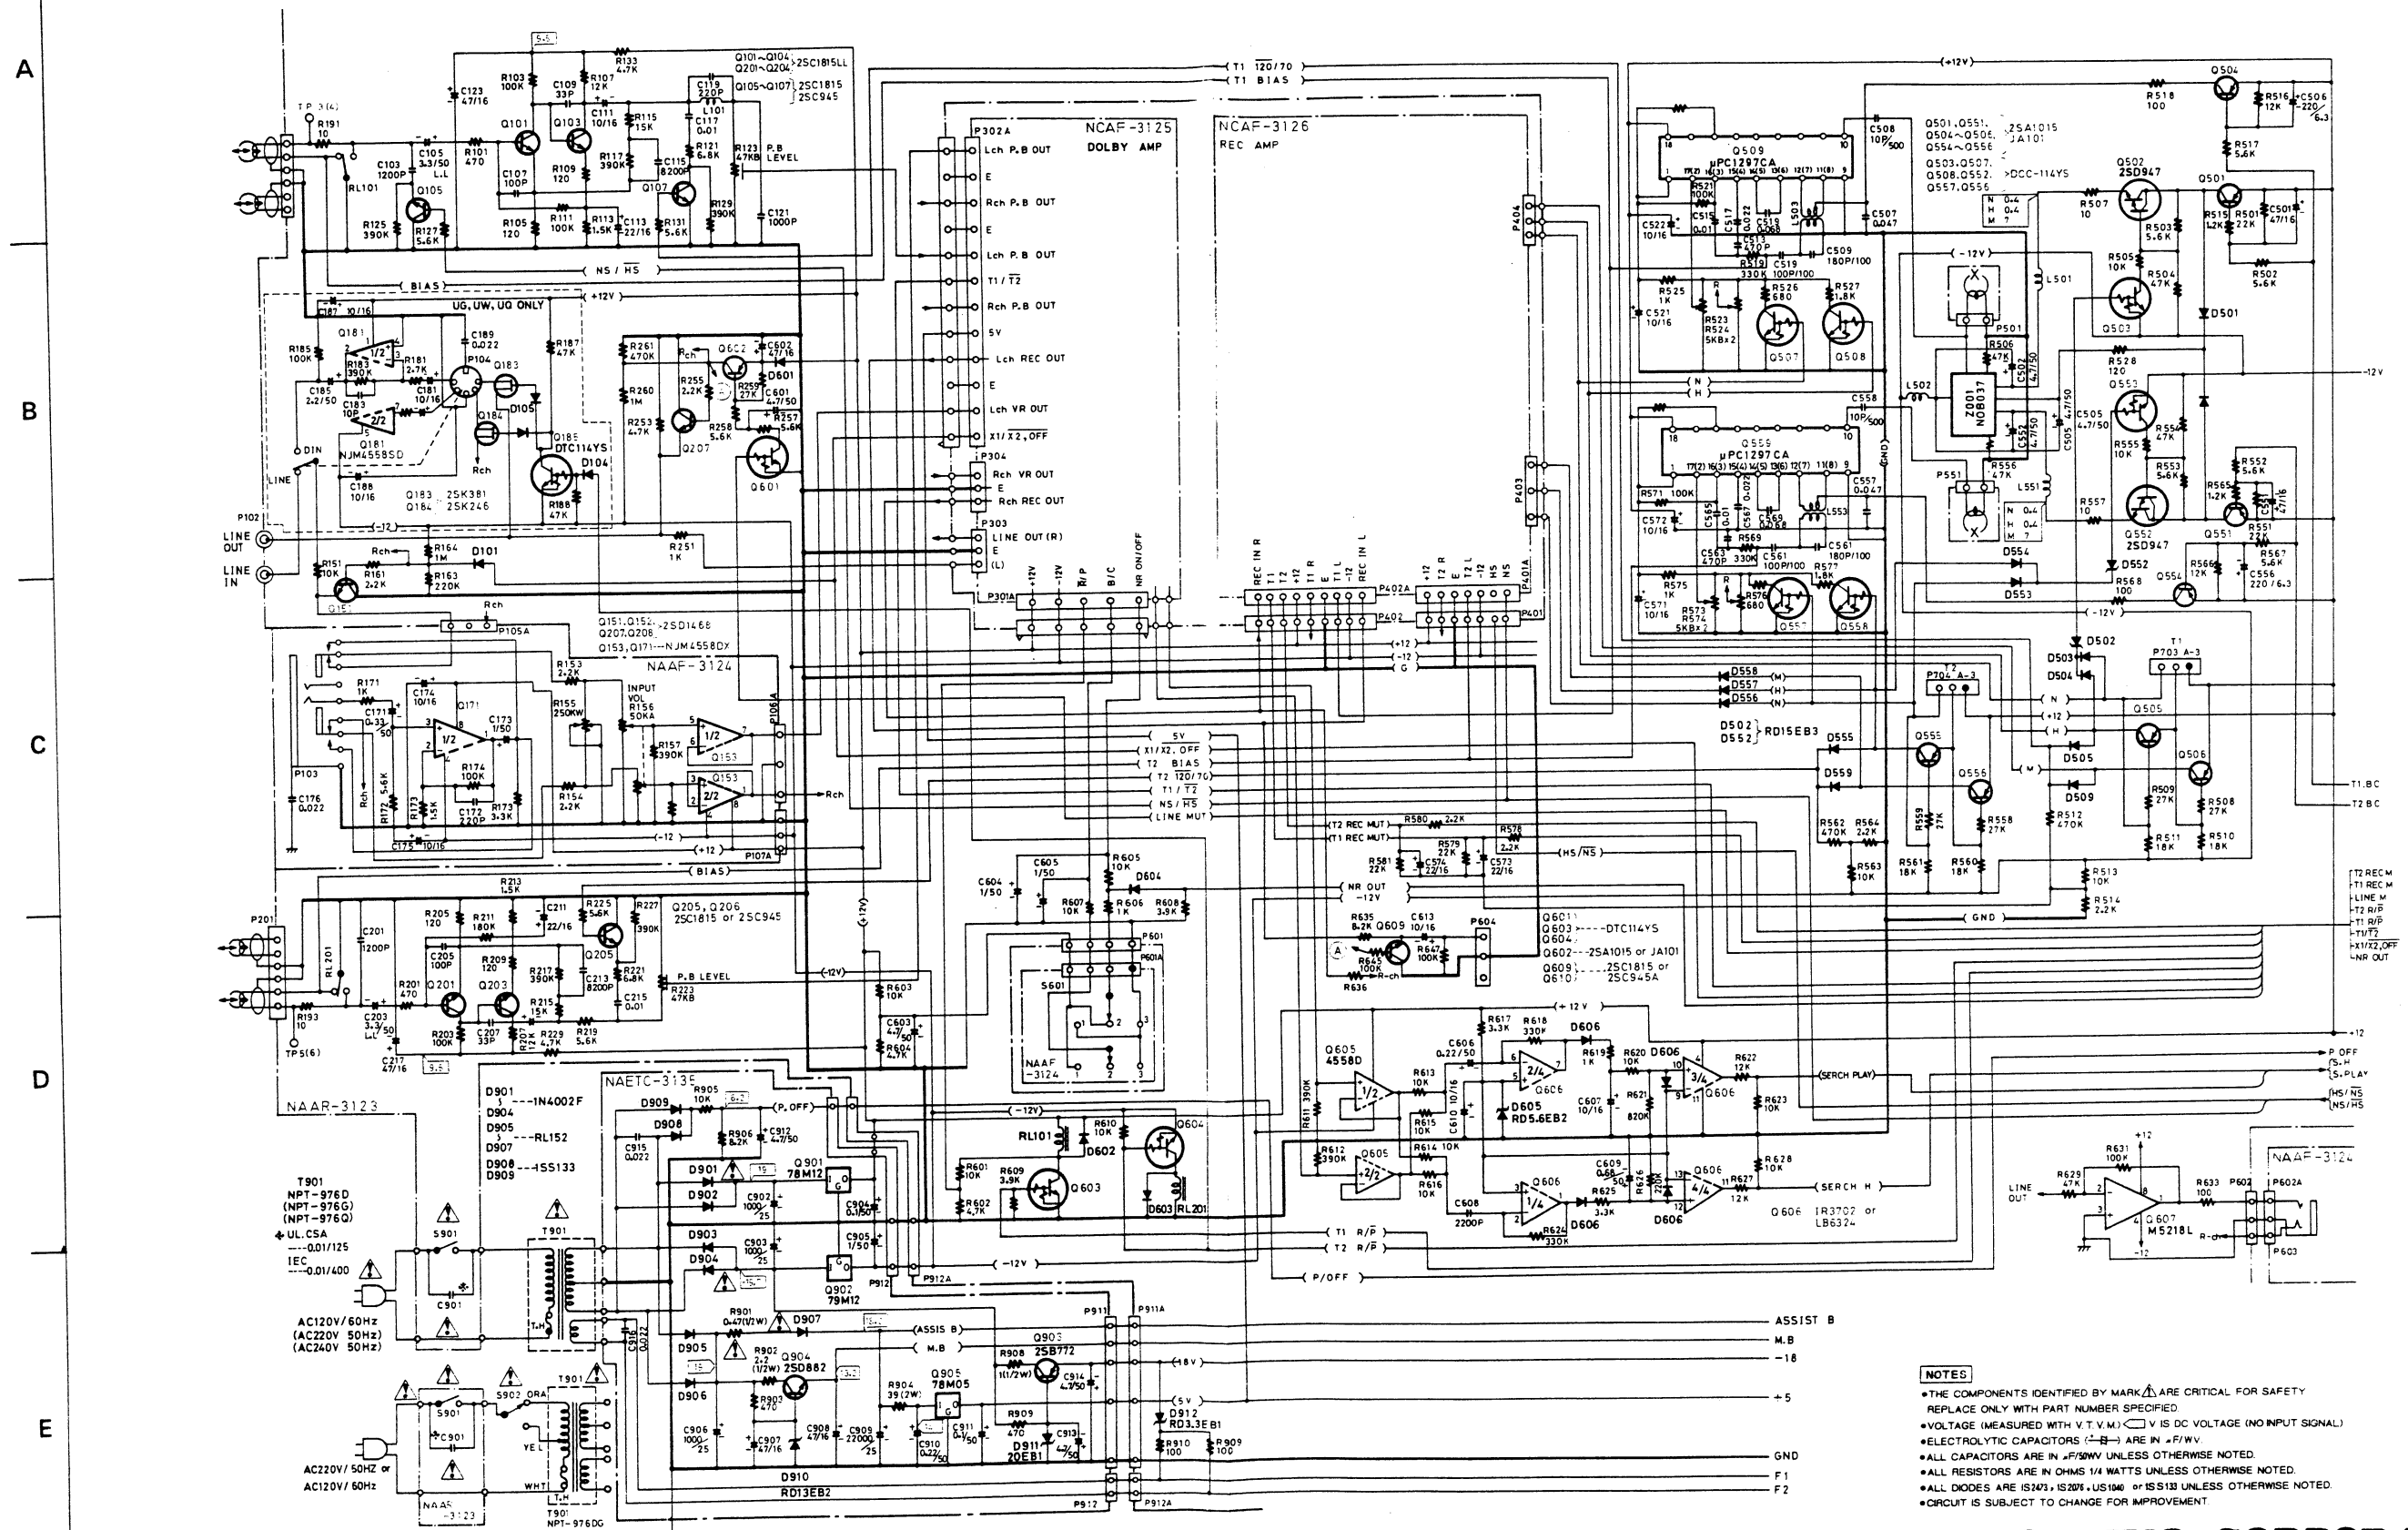


SCHEMATIC DIAGRAM (CONTROL SECTION) 2/3

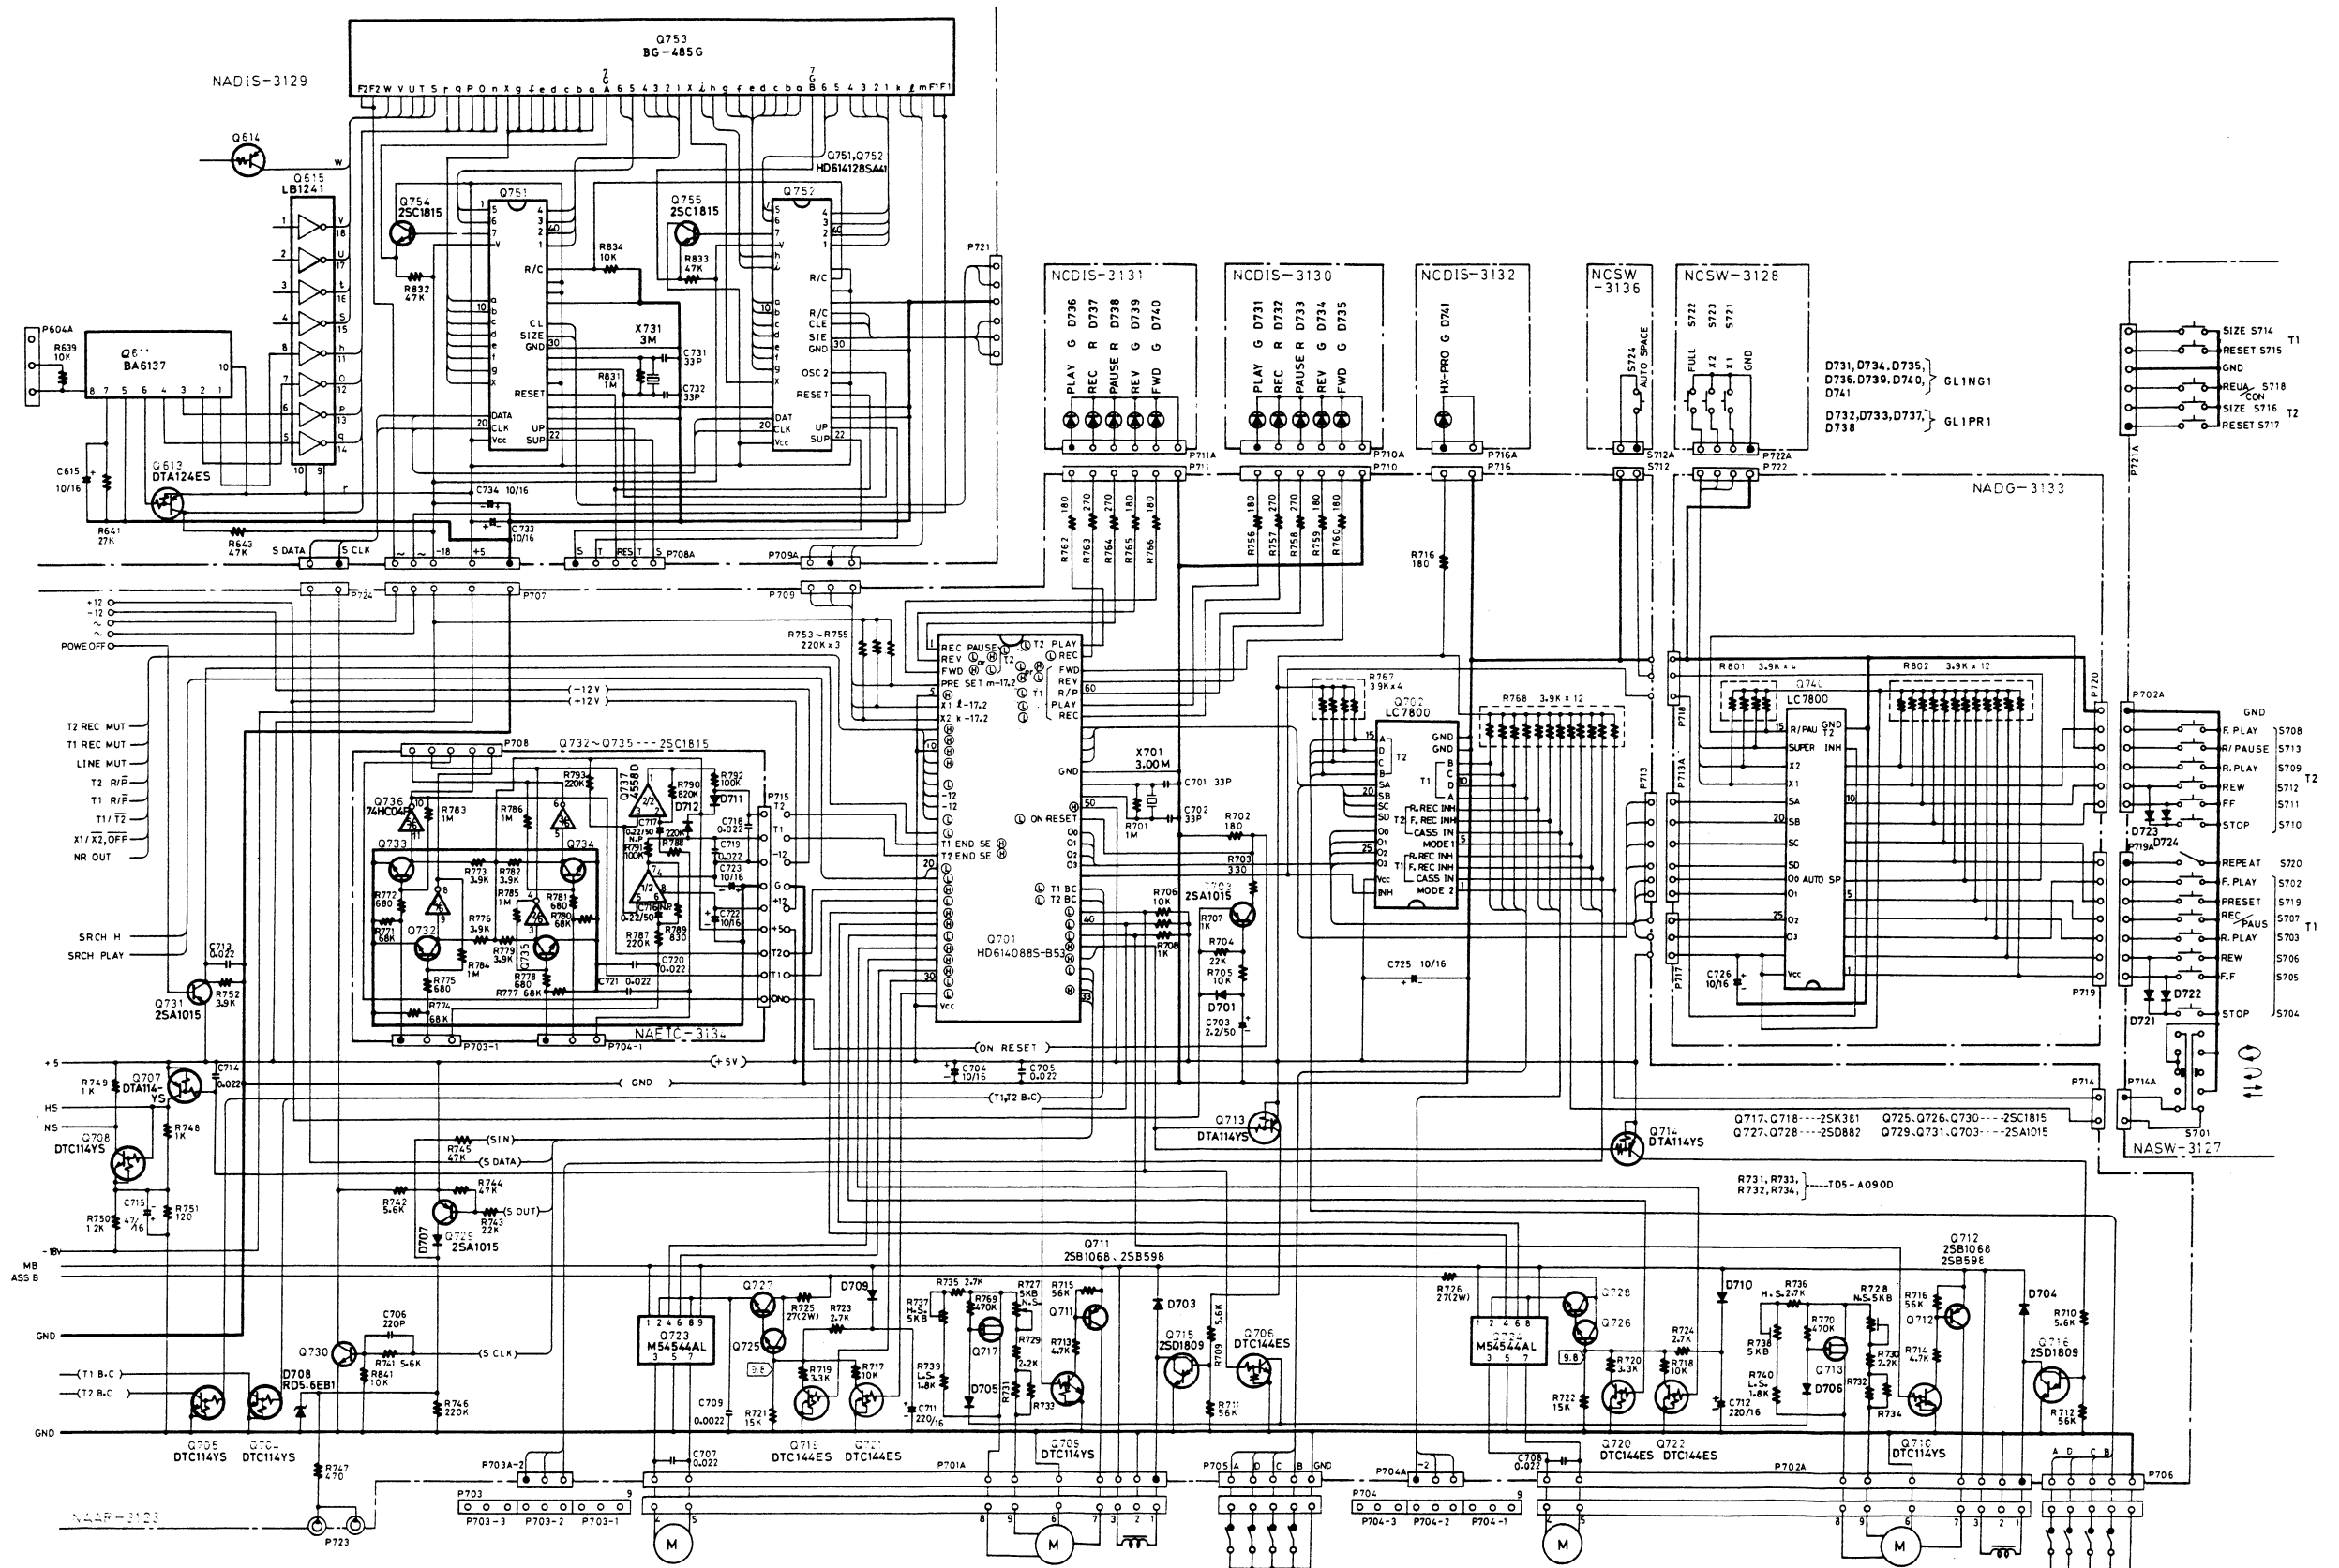


ONKYO CORPORATION

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE


NCAF-3126

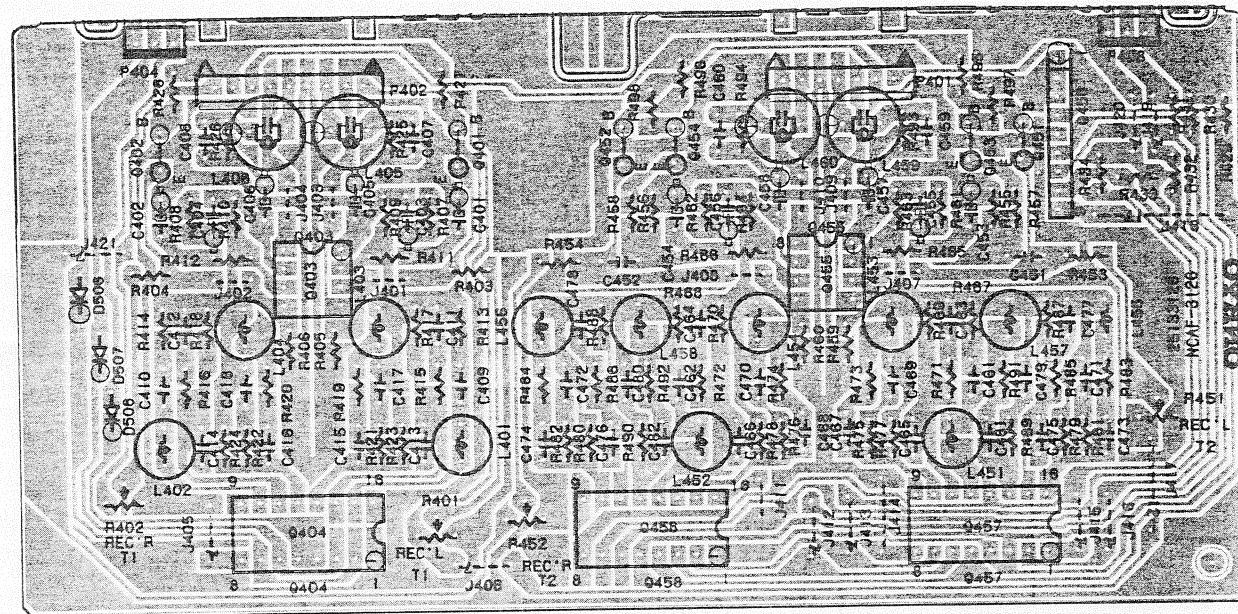


NCAF-3125

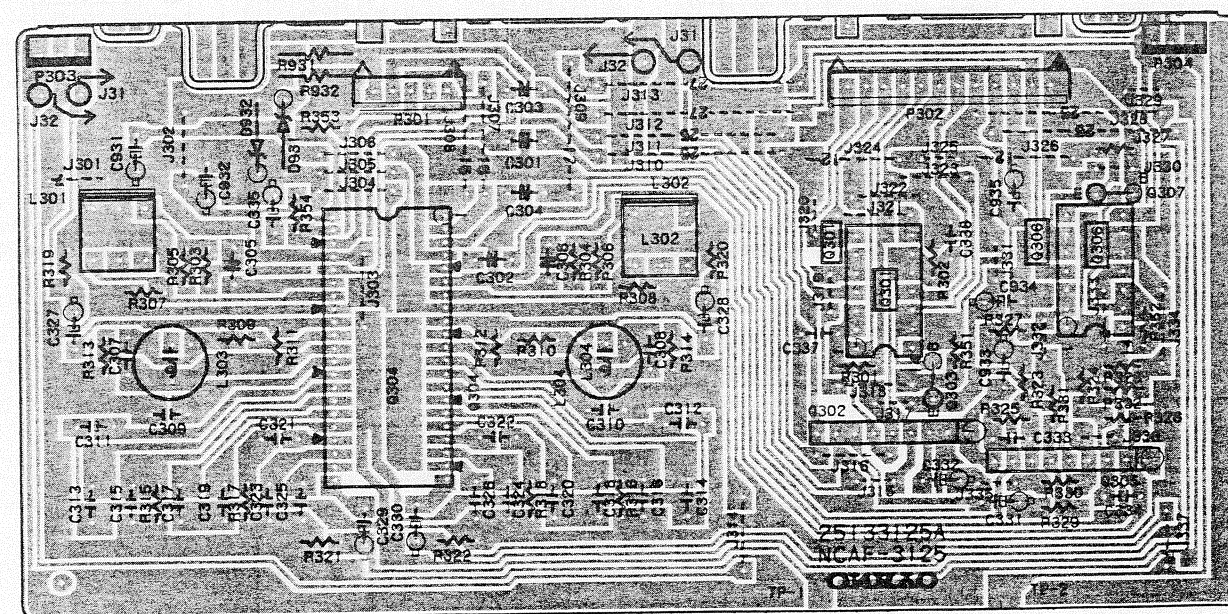


NCSW-3127

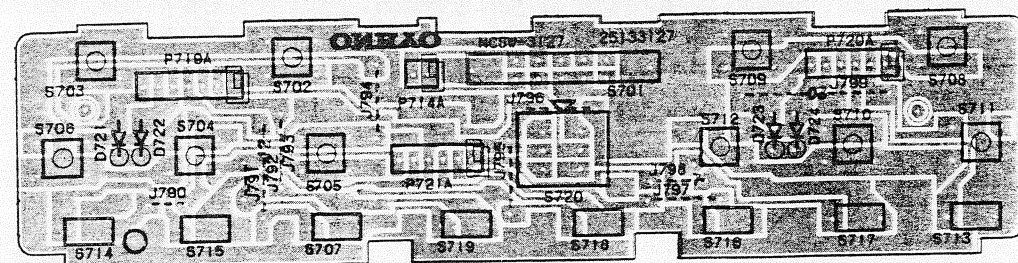


NCETC-3135

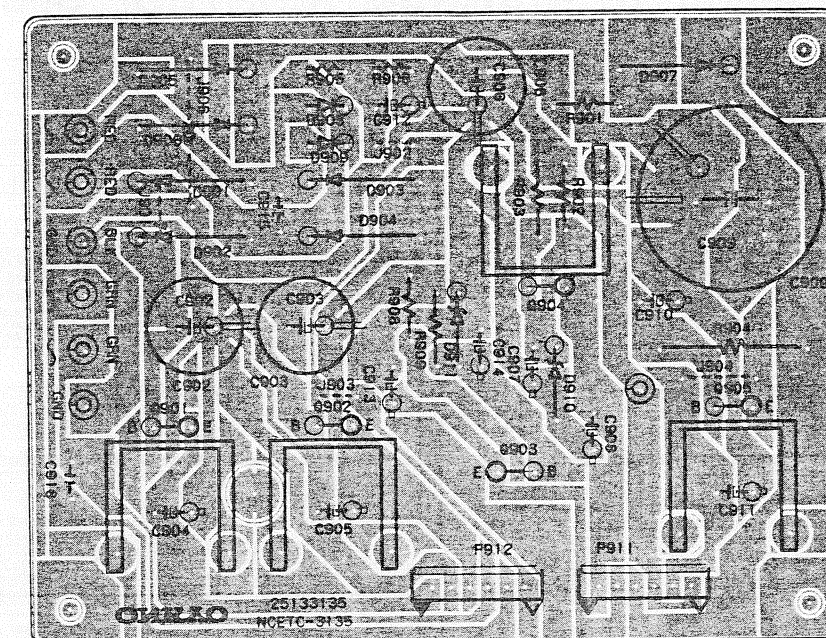



NCDIS-3129

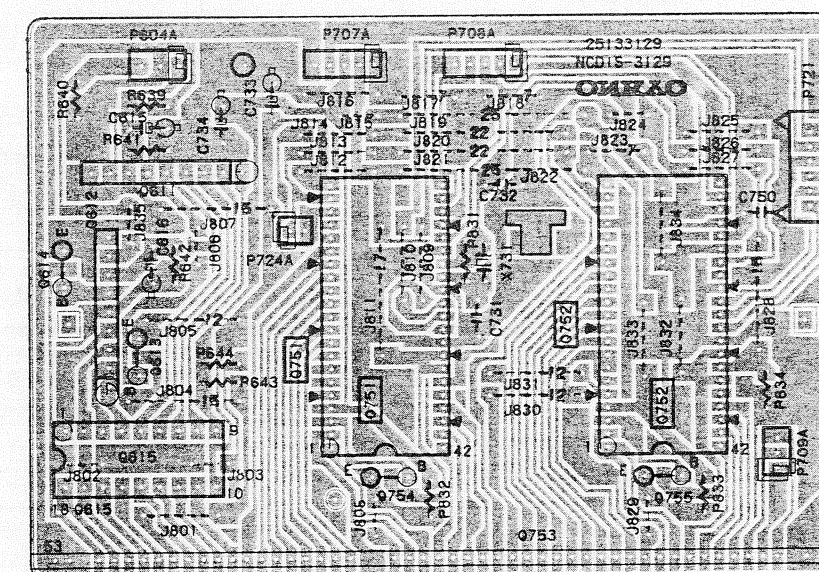

NCAF-3124

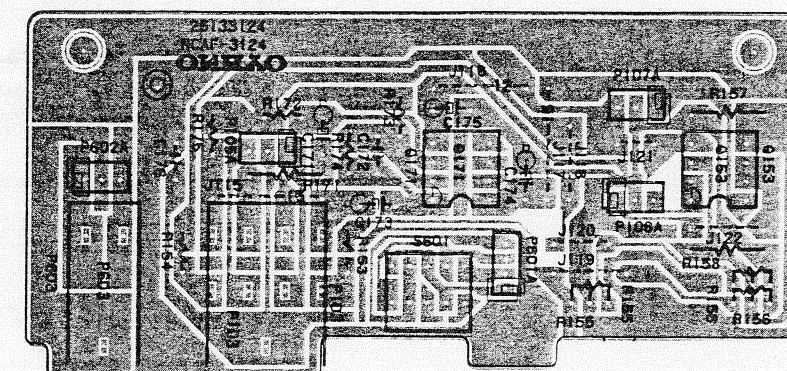

SCHEMATIC DIAGRAM (REC AMP. DOLBY NR SECTION) 3/3

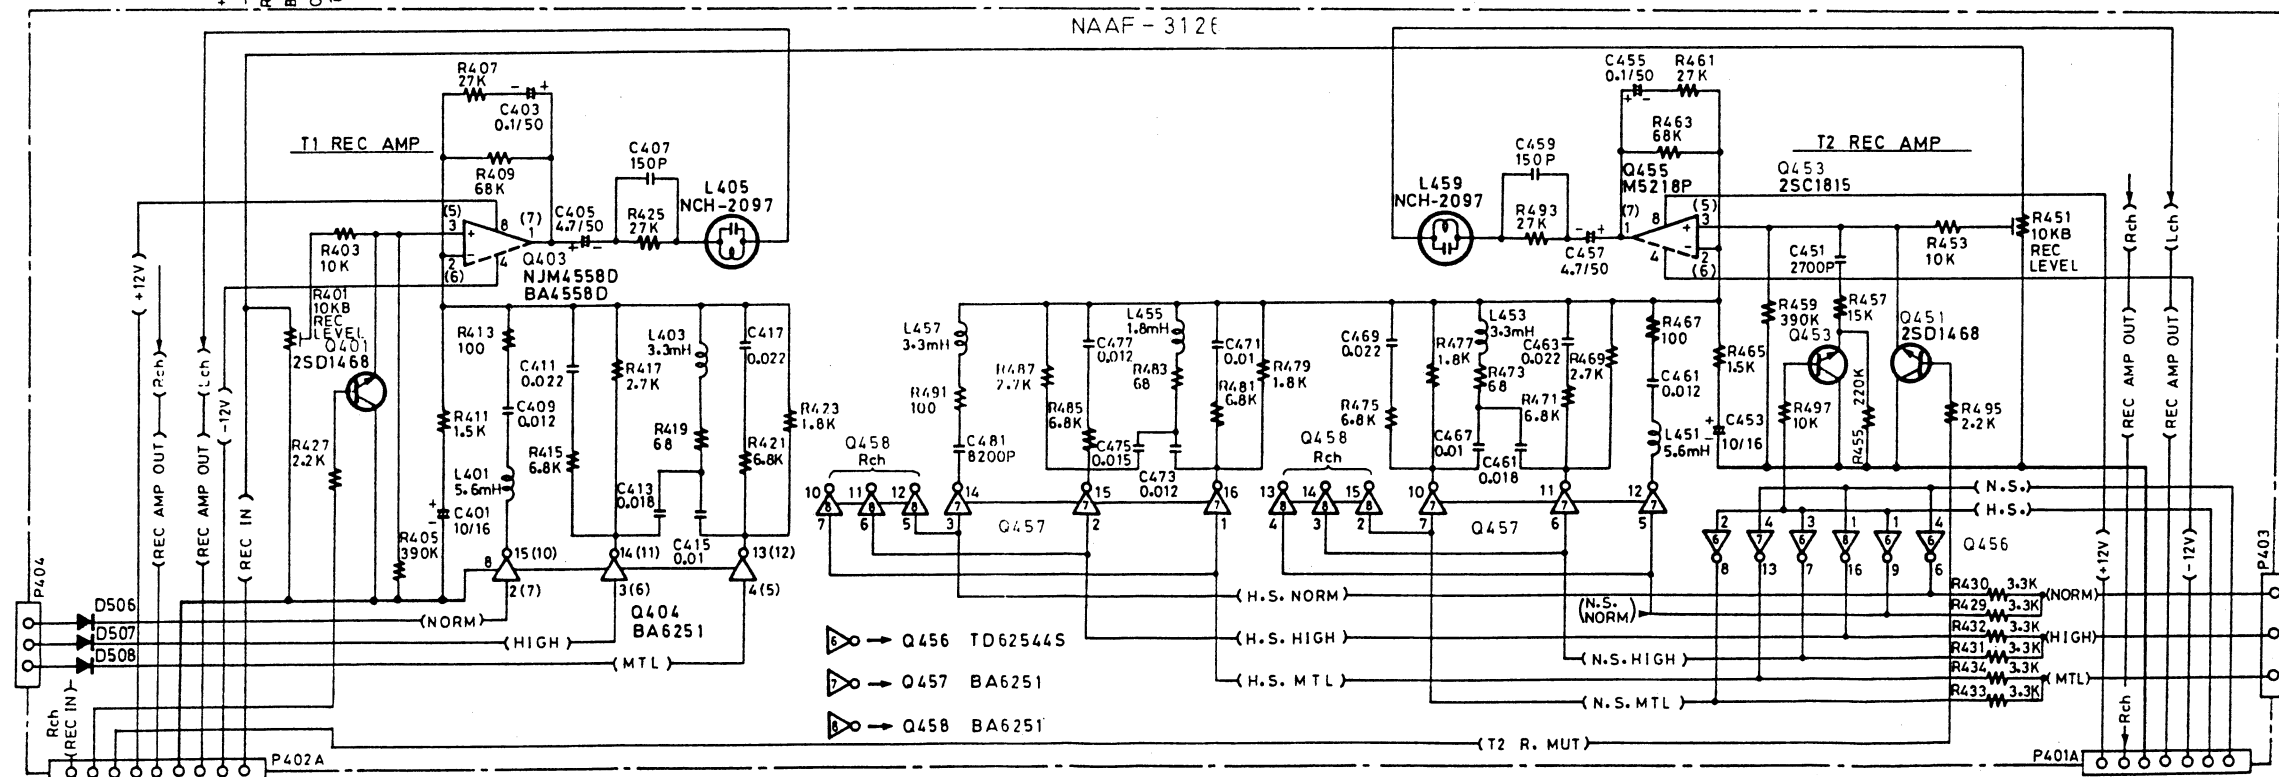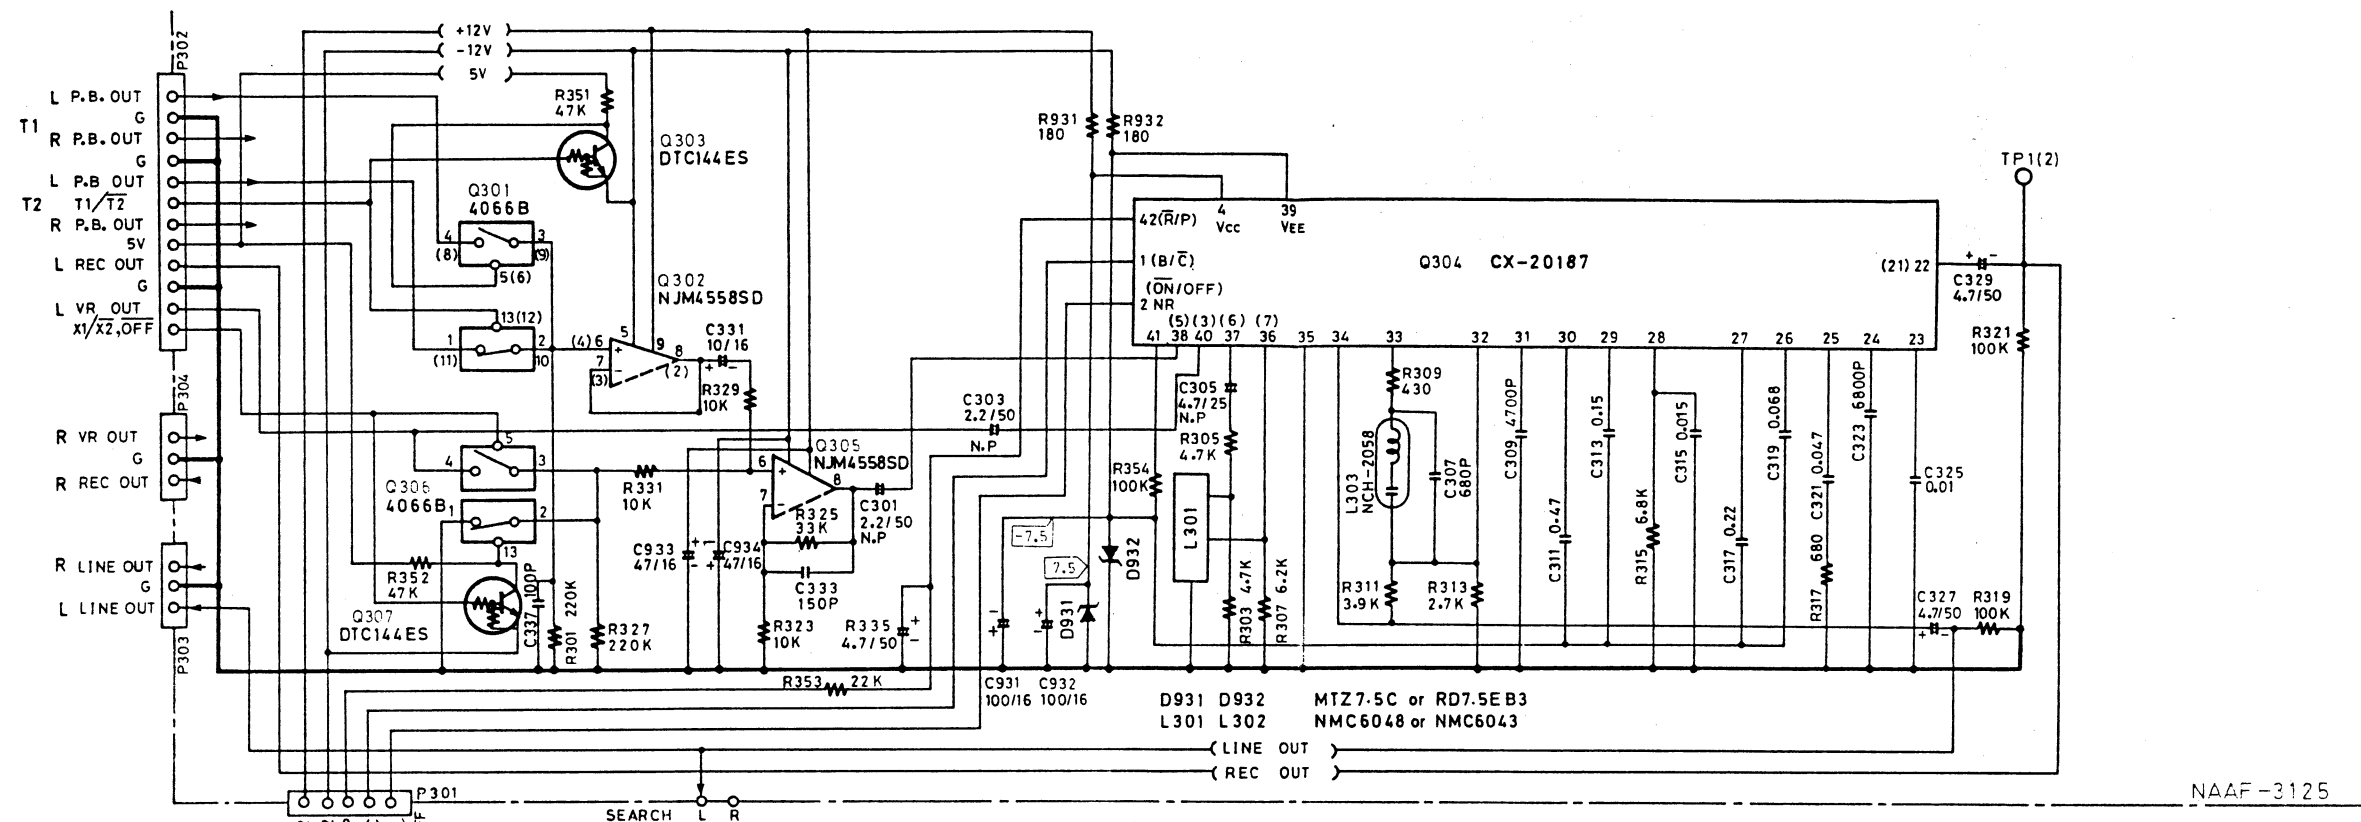

TAPÉ-1

REF.NO.	PART NO.	DESCRIPTION
1	24610673	WASHER
2	24611295	WASHER 2.2+7+0.8
3	24611325	MECHANISM CHASSIS
4	24602432	ASSIST GEAR
5	24602433	CAM
6	24606282	CONTACT
7	24611337	WASHER 7+8+5
8	82112003	PAN-HEAD SCREW M2+3
9	24606283	CONTROL P.C.B.
10	24611294	WASHER 2.3+4.7+0.5
11	24602446	FLYWHEEL AS
12	82112003	PAN-HEAD SCREW M2+3
13	24611148	WASHER 2.6+4.7+0.5
14	24602435	FLYWHEEL
15	24602436	BELT
16	24611326	THRUST SPRING
17	82112603	PAN-HEAD SCREW 2.6P+3
18	24611327	BRACKET (MOTOR)
19	24601231	CAPSTAN MOTOR AS
21	833126082	TAPPING SCREW M2.6+8
22	24603349	LEVER (SLIDE)
23	24611336	REFLECTOR
25	24602437	PINCH ROLLER AS (L)
29	24609010	SPECIAL SCREW M2+3
30	24602440	GEAR
31	24605668	SPRING
32	24602441	GEAR (HEAD)
33	24604089	SHAFT (HEAD BASE)
34	24611328	HEAD BASE AS
35	24605669	SPRING
36	24609009	ADJUSTING SCREW
37	24611329	BRACKET AS (HEAD)
38	24600074	HEAD
39	82111406	PAN HEAD SCREW M1.4+6
40	863125	NUT M2.5
41	24605670	SPRING
42	24611330	TAPE GUIDE
43	863120	NUT M2
44	24606289	SENSOR
48	24605671	SPRING
49	24602438	PINCH ROLLER AS (R)
55	24606284	P.C.B.
59	24606285	LEAF SWITCH
60	24601230	REEL MOTOR AS
62	24603350	ASSIST LEVER (A)
63	24605673	SPRING
65	24602443	BRAKE PULLEY
66	24610952	WASHER 2.6+5.5+0.13
67	24611331	BRAKE RUBBER
68	24602444	BRAKE PULLEY
69	24603351	ASSIST LEVER (B)
70	24611333	SUB CHASSIS
71	24606286	YOKE AS
72	24606287	CORE
73	24605674	SPRING
74	24609011	SPECIAL SCREW M2.6+1.6
75	24605675	SPRING
76	24602445	REEL
77	24611334	REFLECTOR (5P)
78	24605676	SPRING
79	24611335	HOLDER (CASSETTE)
80	24606288	SENSOR
85	24603352	EJECT LEVER
90	82112630	PAN HEAD SCREW M2.6+30
92	24603353	LEVER (R)
93	24603354	EJECT LEVER (R)

REF.NO.	PART NO.	DESCRIPTION
1	24610673	WASHER
2	24611295	WASHER 2.2+7+0.8
3	24611325	MECHANISM CHASSIS
4	24602432	ASSIST GEAR
5	24602433	CAM
6	24606282	CONTACT
7	24611337	WASHER 7+8+5
8	82112003	PAN-HEAD SCREW M2+3
9	24606283	CONTROL P.C.B.
10	24611294	WASHER 2.3+4.7+0.5
11	24602446	FLYWHEEL AS
12	82112003	PAN-HEAD SCREW M2+3
13	24611148	WASHER 2.6+4.7+0.5
14	24602435	FLYWHEEL
15	24602436	BELT
16	24611326	THRUST SPRING
17	82112603	PAN-HEAD SCREW 2.6P+3
18	24611327	BRACKET (MOTOR)
19	24601231	CAPSTAN MOTOR AS
21	833126082	TAPPING SCREW M2.6+8
22	24603349	LEVER (SLIDE)
23	24611336	REFLECTOR
25	24602437	PINCH ROLLER AS (L)
29	24609010	SPECIAL SCREW M2+3
30	24602440	GEAR
31	24605668	SPRING
32	24602441	GEAR (HEAD)
33	24604089	SHAFT (HEAD BASE)
34	24611328	HEAD BASE AS
35	24605669	SPRING
36	24609009	ADJUSTING SCREW
37	24611329	BRACKET AS (HEAD)
38	24600074	HEAD
39	82111406	PAN HEAD SCREW M1.4+6
40	863125	NUT M2.5
41	24605670	SPRING
42	24611330	TAPE GUIDE
43	863120	NUT M2
44	24606289	SENSOR
48	24605671	SPRING
49	24602438	PINCH ROLLER AS (R)
55	24606284	P.C.B.
59	24606285	LEAF SWITCH
60	24601230	REEL MOTOR AS
62	24603350	ASSIST LEVER (A)
63	24605673	SPRING
65	24602443	BRAKE PULLEY
66	24610952	WASHER 2.6+5.5+0.13
67	24611331	BRAKE RUBBER
68	24602444	BRAKE PULLEY
69	24603351	ASSIST LEVER (B)
70	24611333	SUB CHASSIS
71	24606286	YOKE AS
72	24606287	CORE
73	24605674	SPRING
74	24609011	SPECIAL SCREW M2.6+1.6
75	24605675	SPRING
76	24602445	REEL
77	24611334	REFLECTOR (5P)
78	24605676	SPRING
79	24611335	HOLDER (CASSETTE)
80	24606288	SENSOR
83	24603355	LEVER
84	24603356	EJECT LEVER (L)
85	24603352	EJECT LEVER
90	82112630	PAN HEAD SCREW M2.6+30

[illegible]

D731 D732 D733 D710A 25133130 D734 D735
NCD153130
OILKO

5721 5722 5723
P722A 25F33128
NCSW-3128

25133+36
P712A

G

NC5W3136

014140


S724

REF NO.	PART NO.	DESCRIPTION
1	29051612	Master Carton Box
2	29091204	Pad (L)
3	29091205	Pad (R)
4	29100034A	850 × 650 Poly Bag
5	282301	Sealing hook
6	260012	Damplon tape
7	Accessory bag ass'y	
	29341197	Instruction manual
	2010098A	Connection cable
	29365019	Waranty card (N)
	29358002E	Service station list (N)
	29100006A	350 × 250 Poly bag


REF NO.	PART NO.	DESCRIPTION
1	29051612	Master carton box
2	29091204	Pad (L)
3	29091205	Pad (R)
4	29100034A	850 X 650 Poly bag
5	282301	Sealing hook
6	260012	Damplon tape
7	Accessory bag ass'y	
	29341198	Instruction manual
	29341199	Instruction manual (I)
	2010095	Connection cable
	25055018	Conversion plug (CV-K-2) (W)
	29100006A	350 X 250 Poly bag

— 33 —

TAPE MECHANISM-EXPLODED VIEW (TAPE-1)

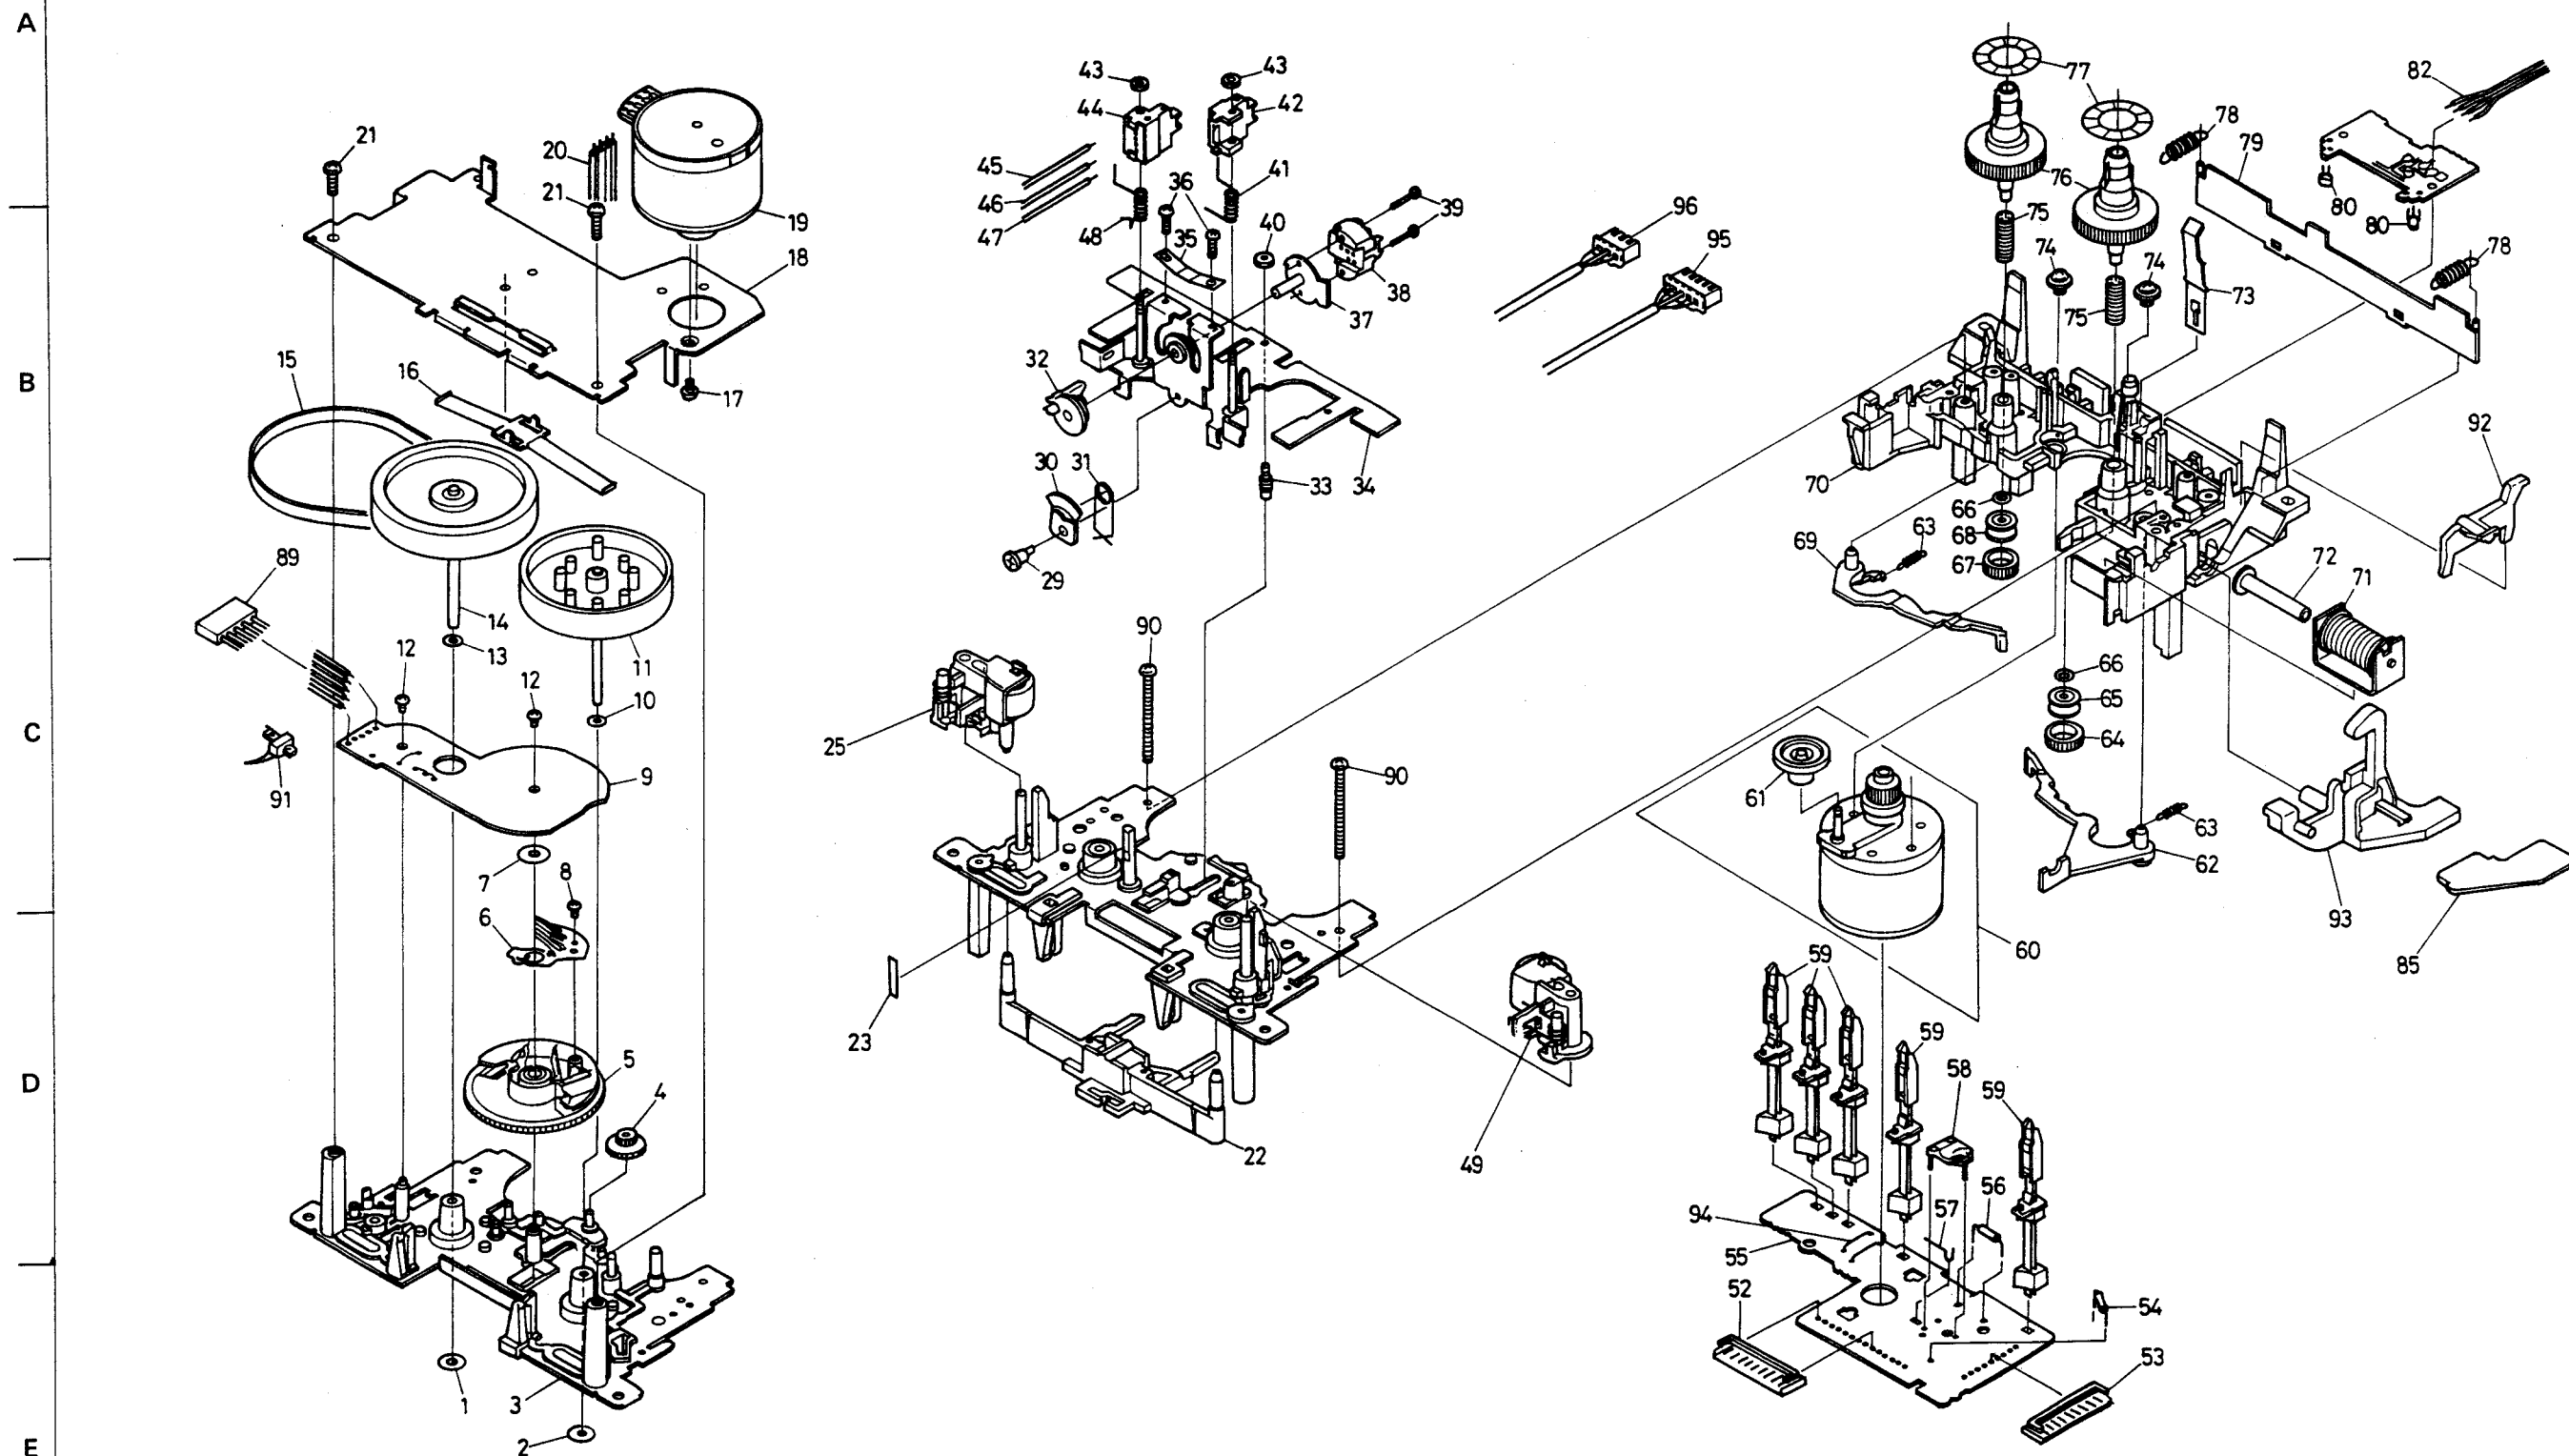

TAPE MECHANISM-EXPLODED VIEW (TAPE-2)

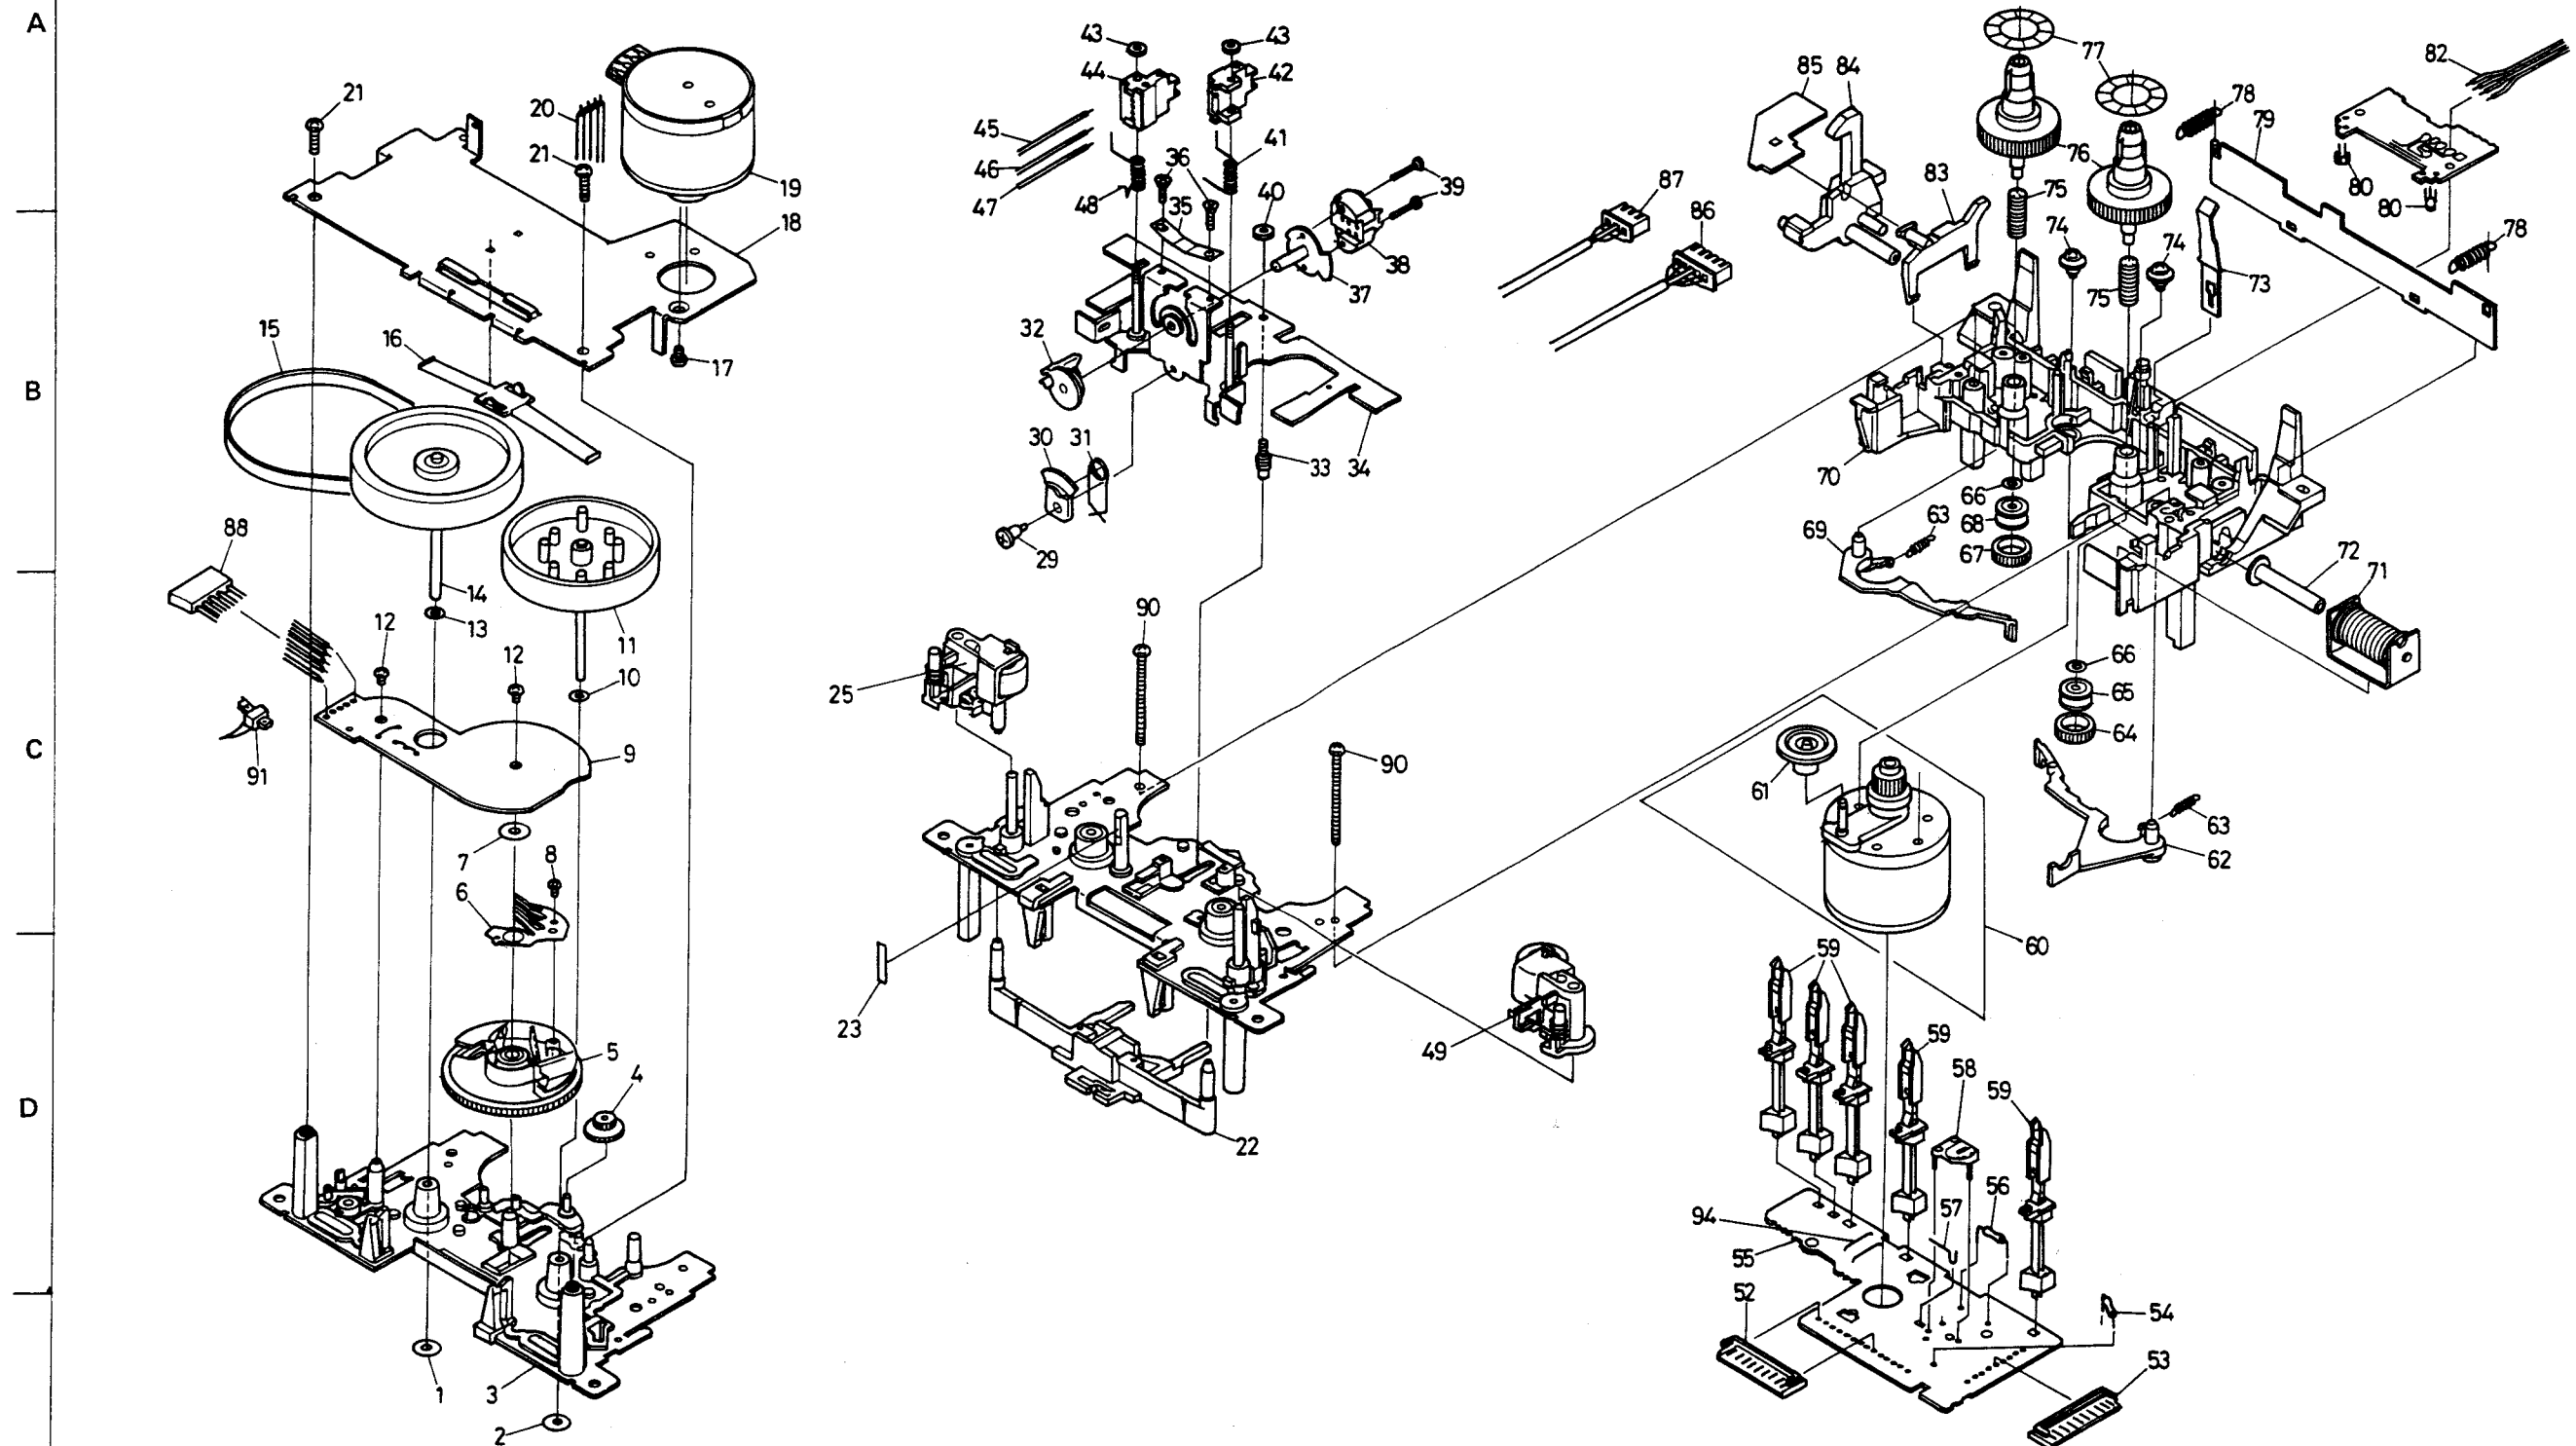**ONKYO CORPORATION**

International Division: No. 24 Mori Bldg., 23-5, Nishi-Shimbashi
 3-chome, Minato-ku, TOKYO 105, JAPAN Tel: 03-432-6987
 Fax: 03-436-6979 TLX: 242-3551 ONKYO J
ONKYO U.S.A. CORPORATION
 200 Williams Drive, Ramsey, N.J. 07446, U.S.A.
 Tel: 201-825-7950 Fax: 201-825-8150